

Thermoplastic Micro LED Exit Sign/Emergency Light Combo


Pace's PAC0434 series model is a slim-profile thermoplastic LED exit sign/emergency light combo that offers modern design, including a standard flat faceplate, long-lasting and energy-efficient LEDs, an innovative LED lamp head and uniform illumination in an economical package.



Features

- Dual-voltage input 120V/277V
- Maintenance-free nickel-cadmium battery
- Energy-saving LED
- Optional Self-Diagnostic version monitors battery/charger failure, battery disconnect and lamp failure
- Optional Remote-Capable version offers up to an additional 3.44 Watts for 90 minutes
- Two factory-installed fully-adjustable, glare-free LED lighting heads in round or square style
- Injection-molded, high-impact, UV-stabilized, UL94 V-0 thermoplastic construction in white or black finish
- Snap-fit faceplate design for installation without tools
- Removable universal chevrons for directional indications
- Top, back or J-box mounting through universal mounting plate and canopy
- Universal single face and double face (extra faceplate included)
- UL 924 listed for damp location

Dimensions

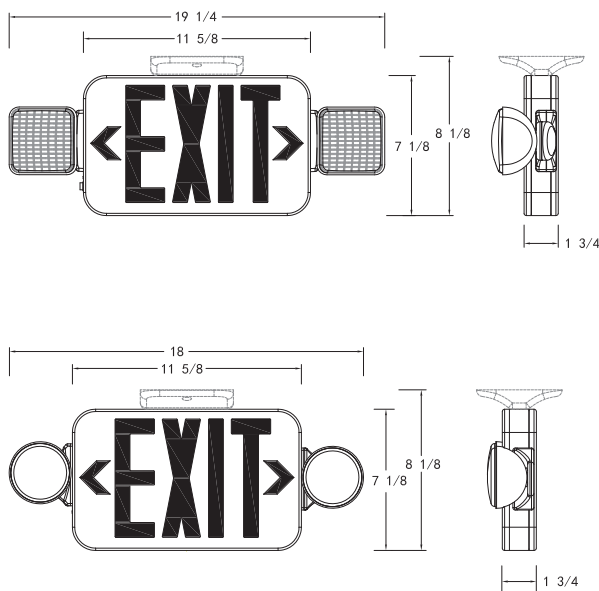

Ordering Information

¹ Options may be combined

² Standard 8 LED option for round head only

Series	Operation	Number of Faces	Letter Color	Finish	Lamp Head Output	Lamp Head Style	Options	Example Cat #
PAC0434	B = Battery Backup	1 = Single Face 2 = Double Face	R = Red G = Green	W = White B = Black	Blank = Standard 8 LED ² H = High-Output 12 LED	Blank = Round Q = Square	SD = Self Diagnostic ¹ RC = Remote Capable ¹	PAC0434B2RWHQSD