

Wet-Location LED Exit Signs and Wet-Location Combo LED Exit Signs/Emergency Lights


Pace's PAC2626 series model offers wet-location-approved exit signs/combo featuring an enclosure resistant to corrosive atmospheres, non-hazardous dust environment, hose-down water spray or splashing water.



Features

- Dual-voltage input 120V/277V
- Maintenance-free nickel-cadmium battery
- Energy-saving LED
- Combo version includes two sealed and gasketed 6V, 5.4W weatherproof lighting heads with tempered glass lenses (incandescent wedge-base lamps)
- Corrosion- and impact-resistant thermoplastic housing
- Clear polycarbonate faceplate with vinyl EXIT stencil
- Sealed and gasketed housing
- Field-selectable chevron directional indicator punch-outs
- Single face, surface mount only
- Includes screws and hardware for mounting
- Sealed test switch and status indicator
- UL 924 listed for wet location

Dimensions

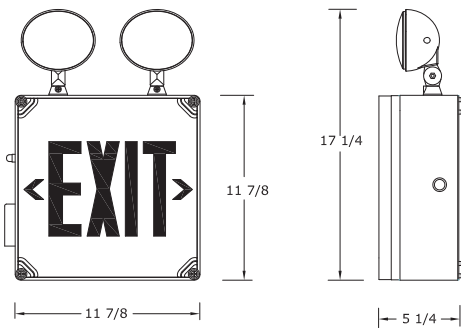

Ordering Information

Series	Operation	Letter Color	Finish	Example Cat #
PAC2626	Blank = AC B = Battery Backup C = Combo	R = Red G = Green	G = Gray	PAC2626BRG