

Low-Profile Fluorescent Emergency Lighting Ballasts




Pace's Low-Profile Emergency Ballast series allows a fixture to be used for both normal AC operation and emergency operation. In the event of a power failure, the unit will switch to emergency mode and operate one or two of the existing lamps for a minimum of 90 minutes each.

All ballasts include a battery pack, battery charger and inverter circuit in a heavy-duty compact steel case. The low-profile emergency ballast can be mounted on top of the fixture or in the wire-way, and is designed to comply with the latest codes and performance standards, including UL 924.


Features

- Dual-voltage input 120V/277V
- Galvanized steel case
- Maintenance-free nickel-cadmium battery
- May be installed in switched or unswitched fixtures
- See Lamp Compatibility Chart page for supported lamp types
- Approval for use in sealed gasketed fixtures
- Time Delay feature for compatibility with end-of-lamp-life circuitry
- Temp ratings vary

PAC0388-B

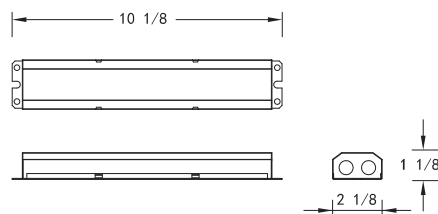

PAC0455-2L

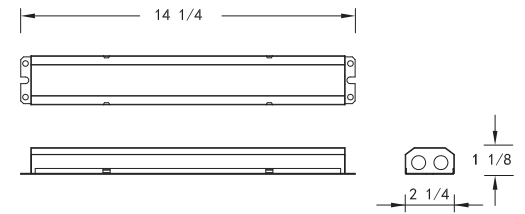

PAC0457

