

Thermoplastic LED Exit Signs


Pace's PAC0102 series model offers a slim-profile, thermoplastic LED exit sign that is designed for long life, energy efficiency and uniform illumination in an economical package.

Features

- Dual-voltage input I20V/277V
 - Maintenance-free nickel-cadmium battery
 - Energy-saving LED
 - Optional Self-Diagnostic version monitors battery/charger failure, battery disconnect and lamp failure
 - Injection-molded, high-impact, UV-stabilized, UL 94 V-0 thermoplastic construction in white or black finish
 - Top, back, J-box or end mounting through universal mounting plate and canopy
 - Removable universal chevrons for directional indication
 - Snap-fit curved faceplate design for installation without tools
 - Universal single face and double face (extra faceplate included)
 - Temp rating: 20°-30° damp
 - DOE and CEC Registered
 - UL 924 Listed for damp location
- Master Carton Quantity 6pc



Dimensions

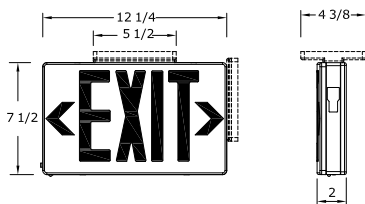

Ordering Information

Series	Operation	Number of Faces	Letter Color	Finish	Options	Example Cat #
PAC0102	Blank = AC Only B = Battery Backup	1 = Single Face 2 = Double Face	R = Red G = Green	W = White B = Black	Blank = Regular SD = Self-Diagnostic DP = Dual Circuit	PAC0102B2RWSD