

## Thermoplastic Micro LED Exit Sign/Emergency Light Combo


Pace's PAC0434 series model is a slim-profile thermoplastic LED exit sign/emergency light combo that offers modern design, including a standard flat faceplate, long-lasting and energy-efficient LEDs, an innovative LED lamp head and uniform illumination in an economical package.

### Features

- Dual-voltage input I20V/277V
  - Maintenance-free nickel-cadmium battery and RC/RCS versions Maintenance-free nickel-metal hydride battery
  - Energy-saving LED
  - Optional Self-Diagnostic version monitors battery/charger failure, battery disconnect and lamp failure
  - Optional Remote-Capable version offers up to an additional 3.44 Watts for 90 minutes
  - Two factory-installed fully-adjustable, glare-free LED lighting heads in round or square style
  - Injection-molded, high-impact, UV-stabilized, UL94 V-0 thermoplastic construction in white or black finish
  - Snap-fit faceplate design for installation without tools
  - Removable universal chevrons for directional indications
  - Top, back or J-box mounting through universal mounting plate and canopy
  - Universal single face and double face (extra faceplate included)
  - Temp rating: 20°-30° damp
  - DOE and CEC Registered
  - UL 924 Listed for damp location
  - CUL Listed
- Master Carton Quantity 6pc



### Dimensions

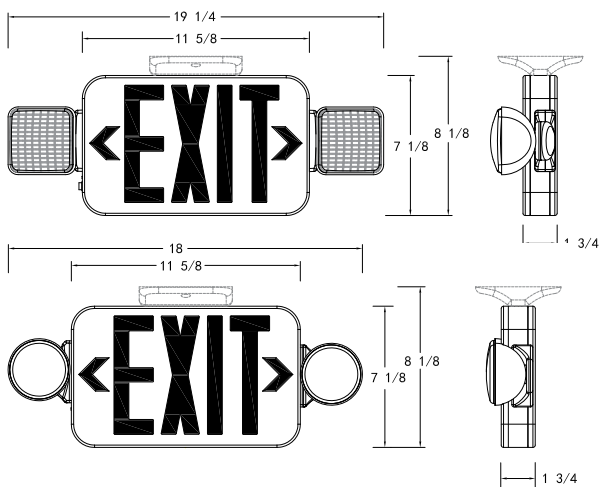

### Lumen Output

- Total Lumens:
  - Standard: 60
  - High Output: 126
  - Square: 82

### Ordering Information

<sup>1</sup> Options may be combined  
<sup>2</sup> Standard 8 LED option for round head only

Series	Operation	Number of Faces	Letter Color	Finish	Lamp Head Output	Lamp Head Style	Options	Example Cat #
PAC0434	B = Battery Backup	1 = Single Face 2 = Double Face	R = Red G = Green	W = White B = Black	Blank = Standard 8 LED <sup>2</sup> H = High-Output 12 LED	Blank = Round Q = Square	SD = Self Diagnostic <sup>1</sup> RC = Remote Capable <sup>1</sup>	PAC-0434B2RWHQSD