



Model Number: PAC0545W-LW
Mounting Height: 7.5 feet
Corridor Width: 3 feet
Spacing to achieve 1fc average: 20 feet

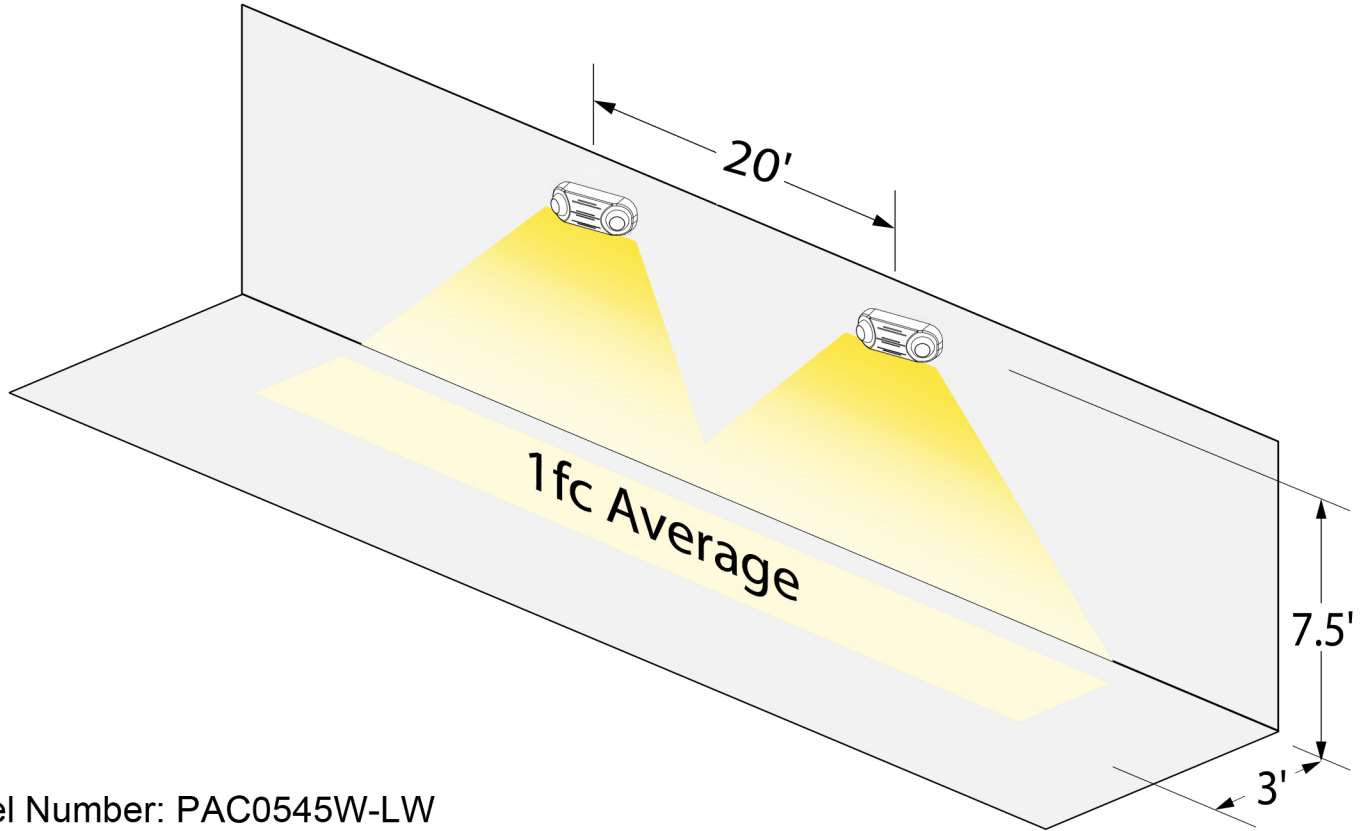

Model Number: PAC0545W-LW
Mounting Height: 7.5 feet
Corridor Width: 6 feet
Spacing to achieve 1fc average: 13 feet

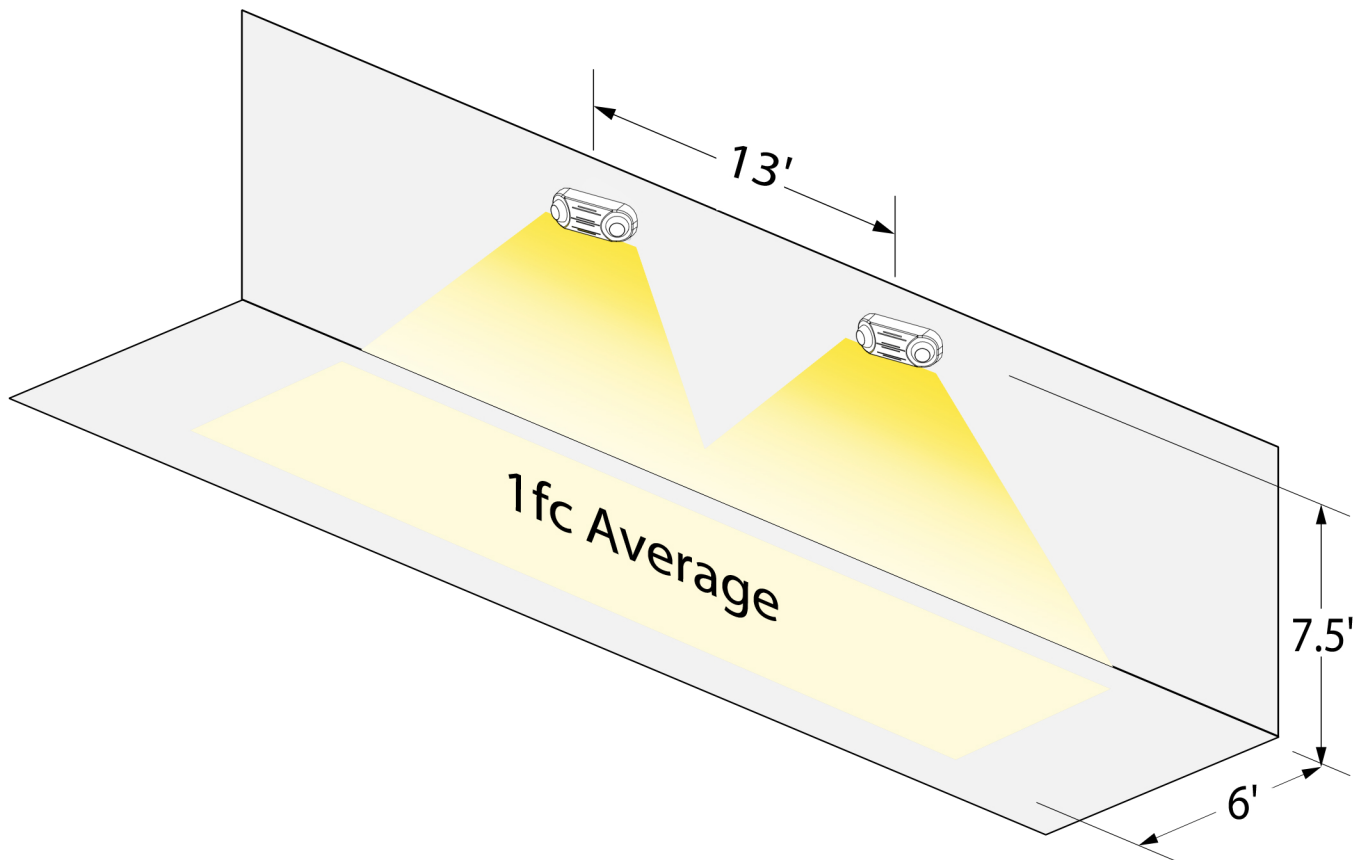

Luminaire Location Summary


Coordinates In Feet

Luminaire Location Summary						
LumNo	Label	X	Y	Z	Orient	Tilt
1	PAC0545W-LW ITL77370	60.5	27.5	7.5	345	30
2	PAC0545W-LW ITL77370	79.5	27.5	7.5	195	30
3	PAC0545W-LW ITL77370	80.5	27.5	7.5	345	30
4	PAC0545W-LW ITL77370	39.5	27.5	7.5	195	30
5	PAC0545W-LW ITL77370	40.5	27.5	7.5	345	30
6	PAC0545W-LW ITL77370	99.5	27.5	7.5	195	30
7	PAC0545W-LW ITL77370	100.5	27.5	7.5	345	30
8	PAC0545W-LW ITL77370	59.5	27.5	7.5	195	30

Calculation Summary

Calculation Summary							
Label	CalcType	Units	Avg	Max	Min	Avg/Min	Max/Min
CalcPts_1	Illuminance	Fc	1.01	3.5	0.1	10.10	35.00

Viewpoint

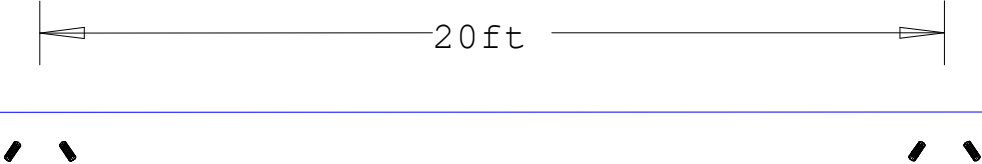

Luminaire Location Summary

Coordinates In Feet

Luminaire Location Summary						
LumNo	Label	X	Y	Z	Orient	Tilt
1	PAC0545W-LW ITL77370	64	27.5	7.5	325	30
2	PAC0545W-LW ITL77370	76	27.5	7.5	215	30
3	PAC0545W-LW ITL77370	77	27.5	7.5	325	30
4	PAC0545W-LW ITL77370	50	27.5	7.5	215	30
5	PAC0545W-LW ITL77370	51	27.5	7.5	325	30
6	PAC0545W-LW ITL77370	89	27.5	7.5	215	30
7	PAC0545W-LW ITL77370	90	27.5	7.5	325	30
8	PAC0545W-LW ITL77370	63	27.5	7.5	215	30

Calculation Summary

Calculation Summary							
Label	CalcType	Units	Avg	Max	Min	Avg/Min	Max/Min
CalcPts_1	Illuminance	Fc	1.03	3.7	0.3	3.43	12.33

Viewpoint

