

## Mini Wet-Location LED Exit Signs/Combo


Pace's PAC0750 series model offers wet-location-approved exit signs/combo featuring an enclosure resistant to corrosive atmospheres, non-hazardous dust environment, hose-down water spray or splashing water. Now available with internal heater option for cold weather installations, lowering the operational temperature rating to -20 C- 50C Wet Locations.

### Features

- Dual-voltage input I20V/277V
  - Maintenance-free nickel-cadmium battery and RC/RCS versions  
Maintenance-free nickel-metal hydride battery
  - Energy-saving LED
  - Optional Self-Diagnostic version monitors battery/charger failure, battery disconnect and lamp failure
  - Optional Remote-Capable version offers up to an additional 3 Watts for 90 minutes
  - Combo version includes two sealed and gasketed 3.6V, 1.17W weatherproof plastic lamp heads
  - Corrosion- and impact-resistant thermoplastic housing
  - Sealed and gasketed housing
  - Field-selectable chevron directional indicator punch-outs
  - Includes screws and hardware for mounting
  - Sealed test switch and status indicator
  - Temp rating: 0°-40° Wet Location / -20°-50° Cold Weather
  - DOE and CEC Registered
  - UL 924 Listed for wet location
- Master Carton Quantity 4pc



### Dimensions

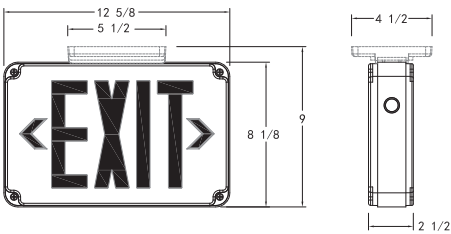

### Lumen Output

- Total Lumens: 170

### Ordering Information

<sup>1</sup> Options may be combined

Series	Operation	Number of Faces	Letter Color	Finish	Options	Example Cat #
PAC0750	Blank = AC Only B = Battery Backup C = Combo	1 = Single Face 2 = Double Face	R = Red G = Green	W = White	Blank = Regular SD = Self Diagnostic <sup>1</sup> RC = Remote Capable <sup>1</sup> HTR= Heater	PAC0750B2RW