



Model Number: PAC0750 Mounting
Height: 7.5 feet
Corridor Width: 3 feet
Spacing to achieve 1fc average: 22 feet

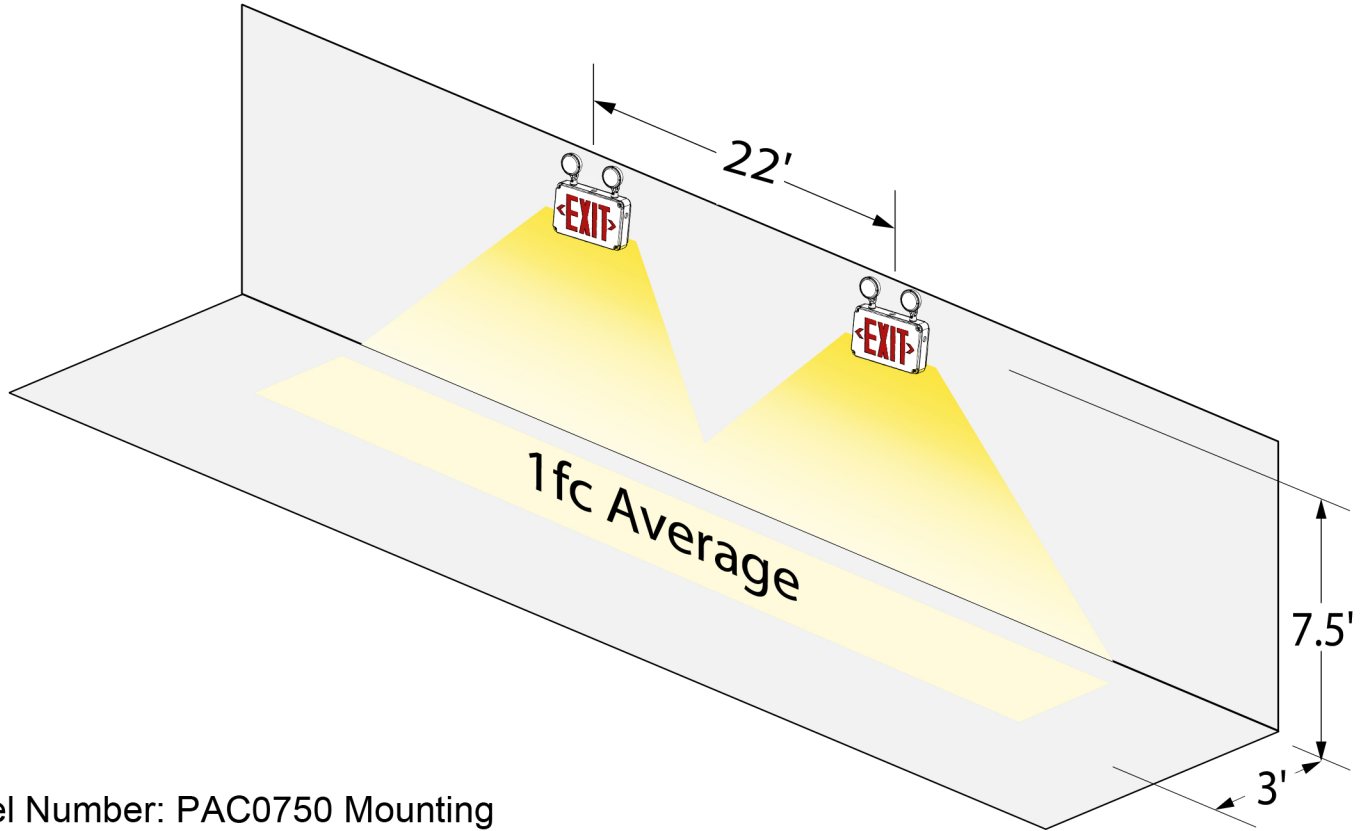

Model Number: PAC0750 Mounting
Height: 7.5 feet
Corridor Width: 6 feet
Spacing to achieve 1fc average: 18 feet

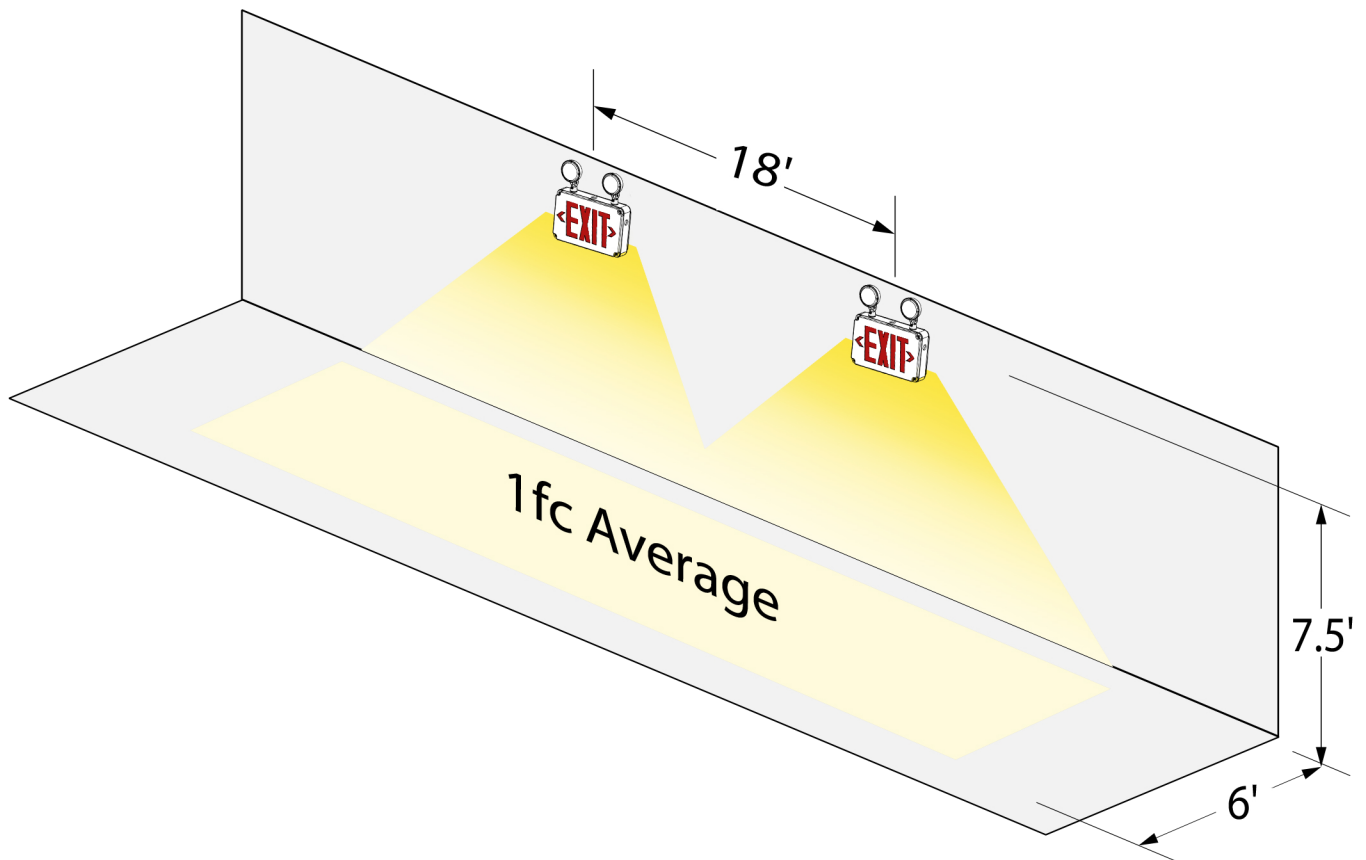

Luminaire Location Summary


Coordinates In Feet

Luminaire Location Summary						
LumNo	Label	X	Y	Z	Orient	Tilt
1	PAC0750 ITL86619	59.5	27.5	7.5	345	30
2	PAC0750 ITL86619	80.5	27.5	7.5	195	30
3	PAC0750 ITL86619	81.5	27.5	7.5	345	30
4	PAC0750 ITL86619	36.5	27.5	7.5	195	30
5	PAC0750 ITL86619	37.5	27.5	7.5	345	30
6	PAC0750 ITL86619	102.5	27.5	7.5	195	30
7	PAC0750 ITL86619	103.5	27.5	7.5	345	30
8	PAC0750 ITL86619	58.5	27.5	7.5	195	30

Calculation Summary

Calculation Summary							
Label	CalcType	Units	Avg	Max	Min	Avg/Min	Max/Min
CalcPts_1	Illuminance	Fc	1.03	1.8	0.3	3.43	6.00

Viewpoint



Luminaire Location Summary



Coordinates In Feet

Luminaire Location Summary						
LumNo	Label	X	Y	Z	Orient	Tilt
1	PAC0750 ITL86619	61.5	27.5	7.5	320	30
2	PAC0750 ITL86619	78.5	27.5	7.5	220	30
3	PAC0750 ITL86619	79.5	27.5	7.5	320	30
4	PAC0750 ITL86619	42.5	27.5	7.5	220	30
5	PAC0750 ITL86619	43.5	27.5	7.5	320	30
6	PAC0750 ITL86619	96.5	27.5	7.5	220	30
7	PAC0750 ITL86619	97.5	27.5	7.5	320	30
8	PAC0750 ITL86619	60.5	27.5	7.5	220	30

Calculation Summary

Calculation Summary							
Label	CalcType	Units	Avg	Max	Min	Avg/Min	Max/Min
CalcPts_1	Illuminance	Fc	1.04	1.9	0.3	3.47	6.33

Viewpoint

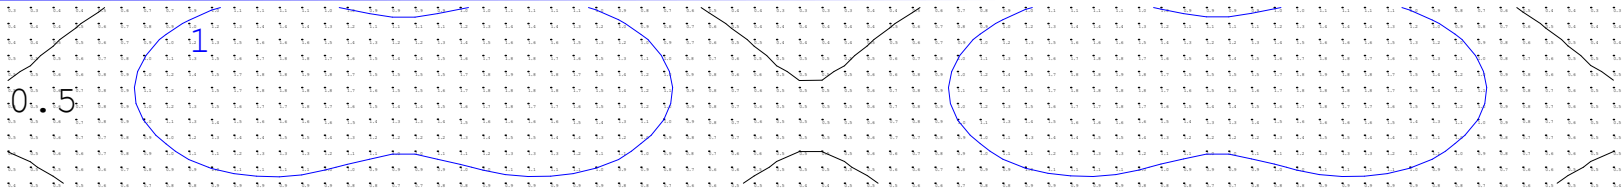

0.5

1