

Mini Wet-Location LED Exit Signs/Combo


Pace's PAC0750 series model offers wet-location-approved exit signs/combo featuring an enclosure resistant to corrosive atmospheres, non-hazardous dust environment, hose-down water spray or splashing water. Now available with internal heater option for cold weather installations, lowering the operational temperature rating to -20 C- 50C Wet Locations.

Features

- Dual-voltage input 120V/277V
 - Maintenance-free nickel-cadmium battery and RC/RCSD versions
Maintenance-free nickel-metal hydride battery
 - Energy-saving LED
 - Optional Self-Diagnostic version monitors battery/charger failure, battery disconnect and lamp failure
 - Optional Remote-Capable version offers up to an additional 3 Watts for 90 minutes
 - Combo version includes two sealed and gasketed 3.6V, 1.17W weatherproof plastic lamp heads
 - Corrosion- and impact-resistant thermoplastic housing
 - Sealed and gasketed housing
 - Field-selectable chevron directional indicator punch-outs
 - Includes screws and hardware for mounting
 - Sealed test switch and status indicator
 - Temp rating: -20°-50° wet
 - DOE and CEC Registered
 - UL 924 Listed for wet location
- Master Carton Quantity 4-pc



Dimensions

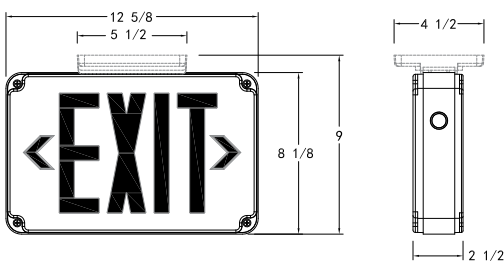

Lumen Output

- Total Lumens: 170

Ordering Information

¹ Options may be combined

Series	Operation	Number of Faces	Letter Color	Finish	Options	Example Cat #
PAC0750	Blank = AC Only B = Battery Backup C = Combo	1 = Single Face 2 = Double Face	R = Red G = Green	W = White	Blank = Regular SD = Self Diagnostic ¹ RC = Remote Capable ¹ HTR= Heater	PAC0750B2RW