



Model Number: PAC0825
Mounting Height: 7.5 feet
Corridor Width: 3 feet
Spacing to achieve 1fc average: 11 feet

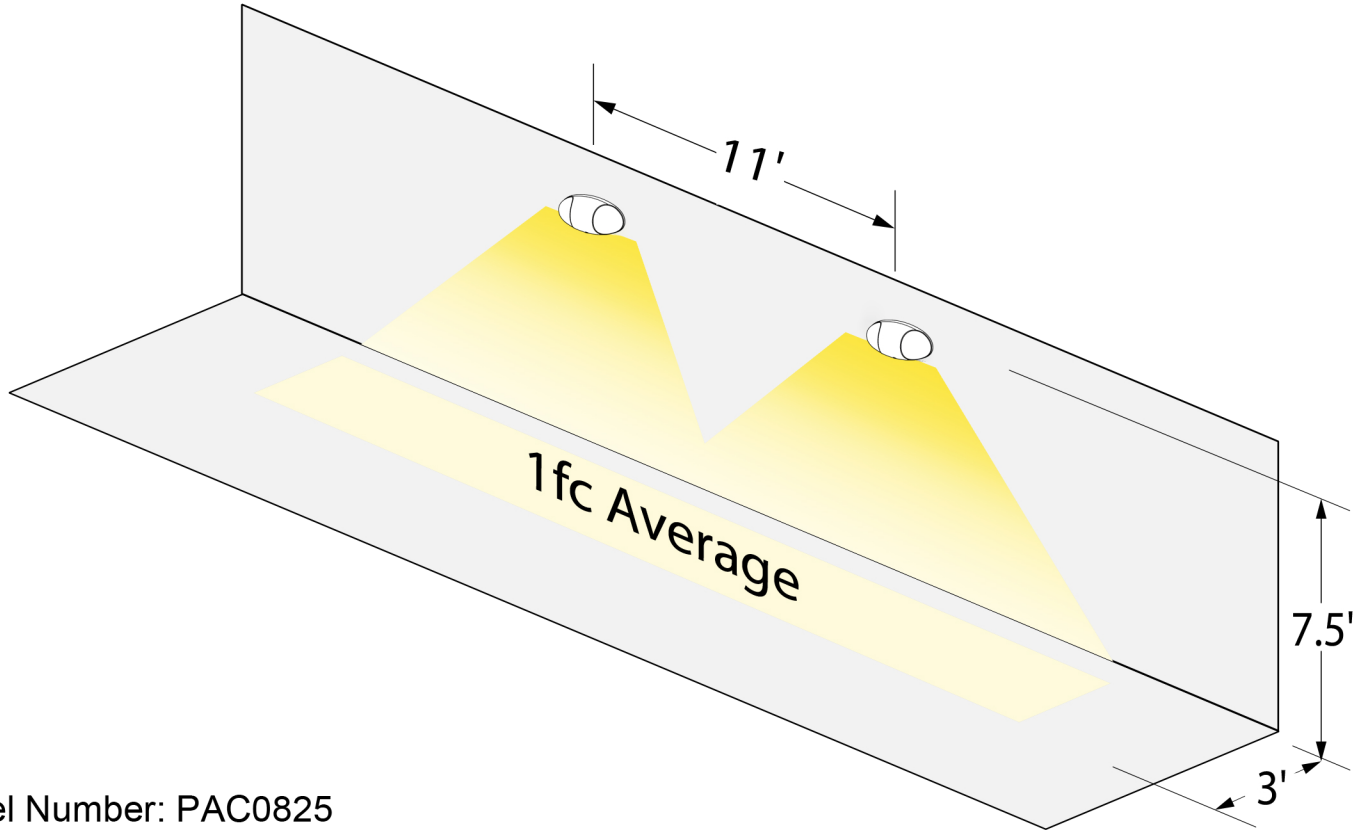

Model Number: PAC0825
Mounting Height: 7.5 feet
Corridor Width: 6 feet
Spacing to achieve 1fc average: 11 feet

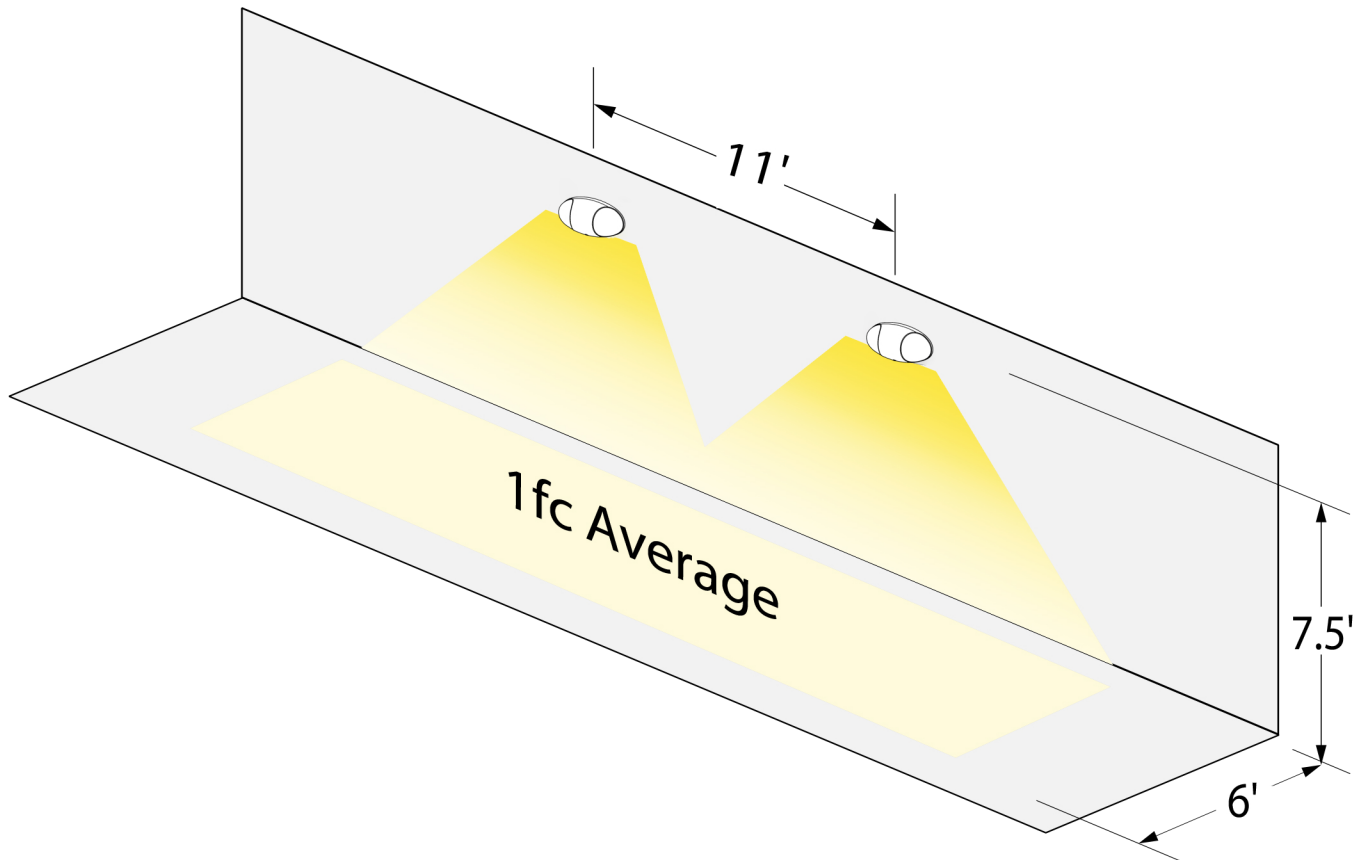

Luminaire Location Summary


Coordinates In Feet

| Luminaire Location Summary | | | | | | |
|----------------------------|--------------------------|------|------|-----|--------|------|
| LumNo | Label | X | Y | Z | Orient | Tilt |
| 1 | ITL88651-GONIOPHOTOMETRY | 64.5 | 27.5 | 7.5 | 270 | 0 |
| 3 | ITL88651-GONIOPHOTOMETRY | 75.5 | 27.5 | 7.5 | 270 | 0 |
| 5 | ITL88651-GONIOPHOTOMETRY | 53.5 | 27.5 | 7.5 | 270 | 0 |
| 7 | ITL88651-GONIOPHOTOMETRY | 86.5 | 27.5 | 7.5 | 270 | 0 |

Calculation Summary

| Calculation Summary | | | | | | | |
|---------------------|-------------|-------|------|-----|-----|---------|---------|
| Label | CalcType | Units | Avg | Max | Min | Avg/Min | Max/Min |
| CalcPts_1 | Illuminance | Fc | 0.99 | 1.6 | 0.4 | 2.48 | 4.00 |

Viewpoint



Luminaire Location Summary

Coordinates In Feet

| Luminaire Location Summary | | | | | | |
|----------------------------|--------------------------|------|------|-----|--------|------|
| LumNo | Label | X | Y | Z | Orient | Tilt |
| 1 | ITL88651-GONIOPHOTOMETRY | 64.5 | 27.5 | 7.5 | 270 | 0 |
| 3 | ITL88651-GONIOPHOTOMETRY | 75.5 | 27.5 | 7.5 | 270 | 0 |
| 5 | ITL88651-GONIOPHOTOMETRY | 53.5 | 27.5 | 7.5 | 270 | 0 |
| 7 | ITL88651-GONIOPHOTOMETRY | 86.5 | 27.5 | 7.5 | 270 | 0 |

Calculation Summary

| Calculation Summary | | | | | | | |
|---------------------|-------------|-------|------|-----|-----|---------|---------|
| Label | CalcType | Units | Avg | Max | Min | Avg/Min | Max/Min |
| CalcPts_1 | Illuminance | Fc | 0.99 | 1.6 | 0.4 | 2.48 | 4.00 |

Viewpoint

