



Model Number: PAC0825WH
Mounting Height: 7.5 feet
Corridor Width: 3 feet
Spacing to achieve 1fc average: 8 feet

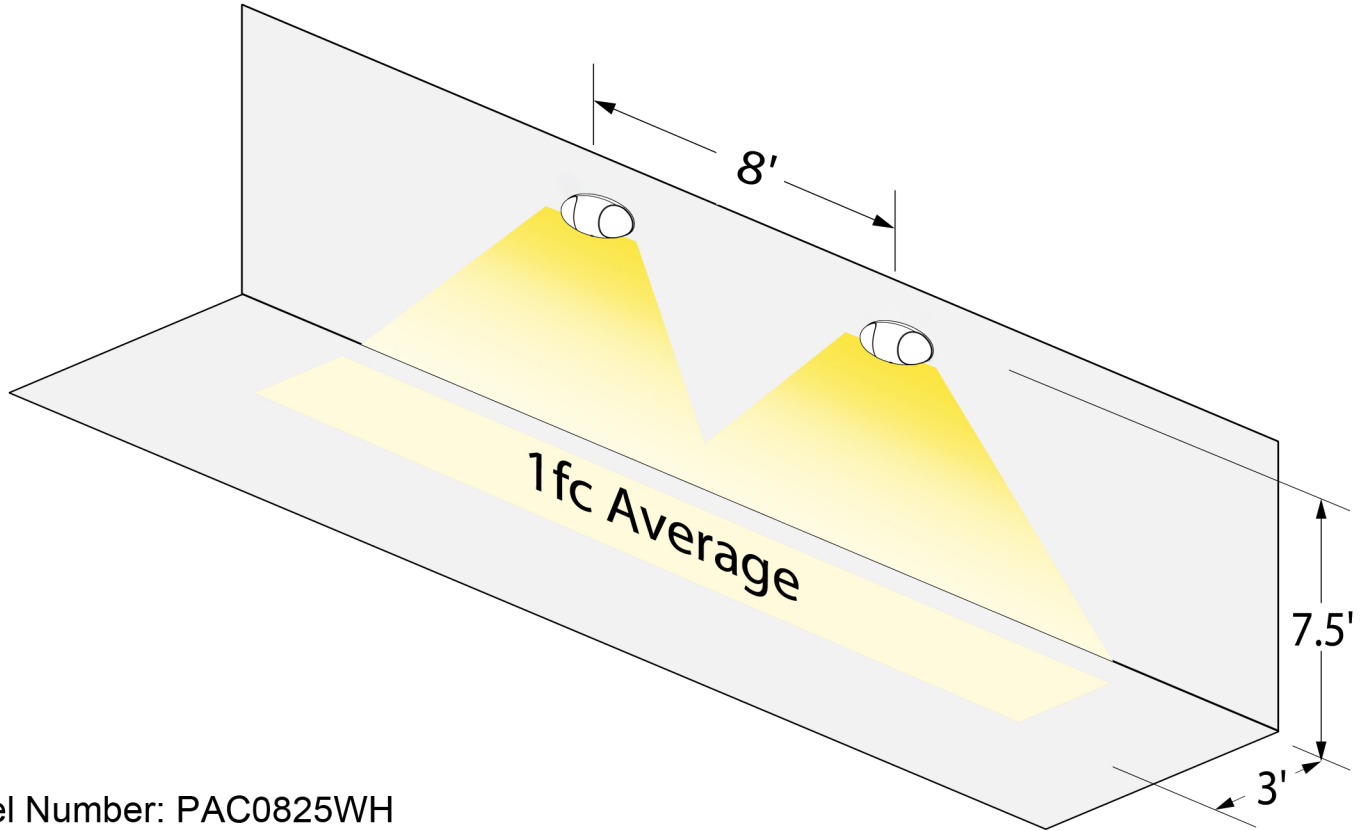

Model Number: PAC0825WH
Mounting Height: 7.5 feet
Corridor Width: 6 feet
Spacing to achieve 1fc average: 11 feet

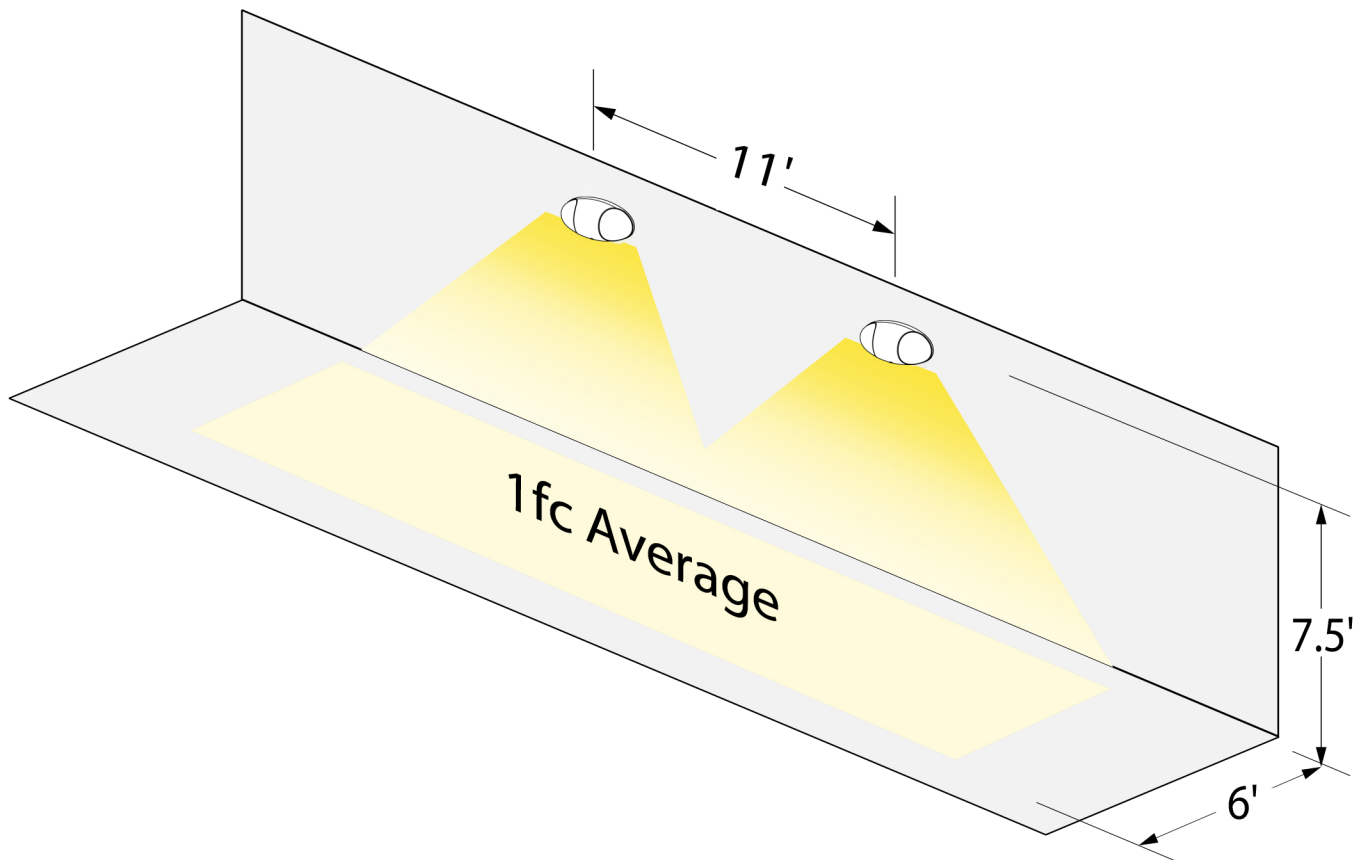

Luminaire Location Summary



Coordinates In Feet

Luminaire Location Summary						
LumNo	Label	X	Y	Z	Orient	Tilt
1	L112110305	66.5	27.5	7.5	310	0
2	L112110305	73.5	27.5	7.5	230	0
3	L112110305	74.5	27.5	7.5	310	0
4	L112110305	57.5	27.5	7.5	230	0
5	L112110305	58.5	27.5	7.5	310	0
6	L112110305	81.5	27.5	7.5	230	0
7	L112110305	82.5	27.5	7.5	310	0
8	L112110305	65.5	27.5	7.5	230	0

Calculation Summary

Calculation Summary							
Label	CalcType	Units	Avg	Max	Min	Avg/Min	Max/Min
CalcPts_1	Illuminance	Fc	1.04	1.8	0.4	2.60	4.50

Viewpoint

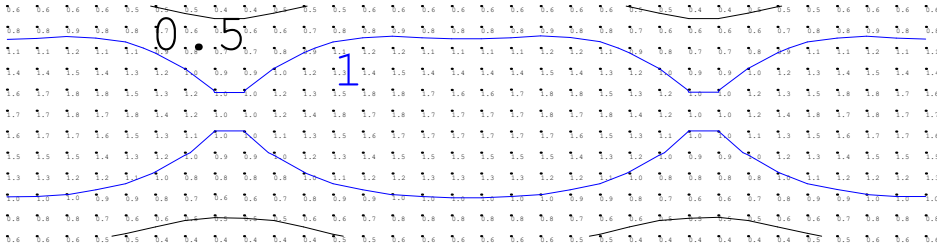

Luminaire Location Summary

Coordinates In Feet

Luminaire Location Summary						
LumNo	Label	X	Y	Z	Orient	Tilt
1	L112110305	65	27.5	7.5	340	0
2	L112110305	75	27.5	7.5	200	0
3	L112110305	76	27.5	7.5	340	0
4	L112110305	53	27.5	7.5	200	0
5	L112110305	54	27.5	7.5	340	0
6	L112110305	86	27.5	7.5	200	0
7	L112110305	87	27.5	7.5	340	0
8	L112110305	64	27.5	7.5	200	0

Calculation Summary

Calculation Summary							
Label	CalcType	Units	Avg	Max	Min	Avg/Min	Max/Min
CalcPts_1	Illuminance	Fc	1.04	1.7	0.4	2.60	4.25

Viewpoint

