



Model Number: PAC0855
Mounting Height: 7.5 feet
Corridor Width: 3 feet
Spacing to achieve 1fc average: 19 feet

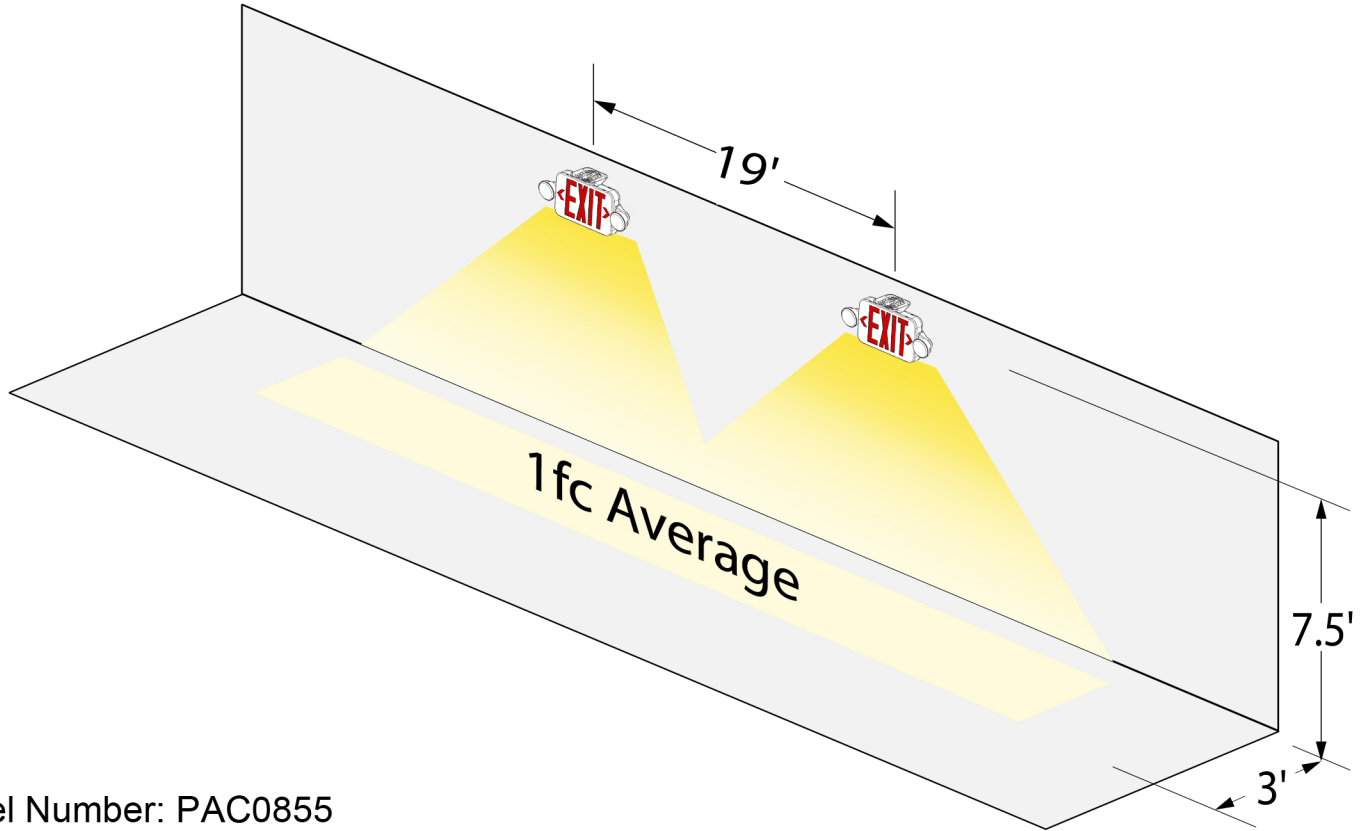

Model Number: PAC0855
Mounting Height: 7.5 feet
Corridor Width: 6 feet
Spacing to achieve 1fc average: 15 feet

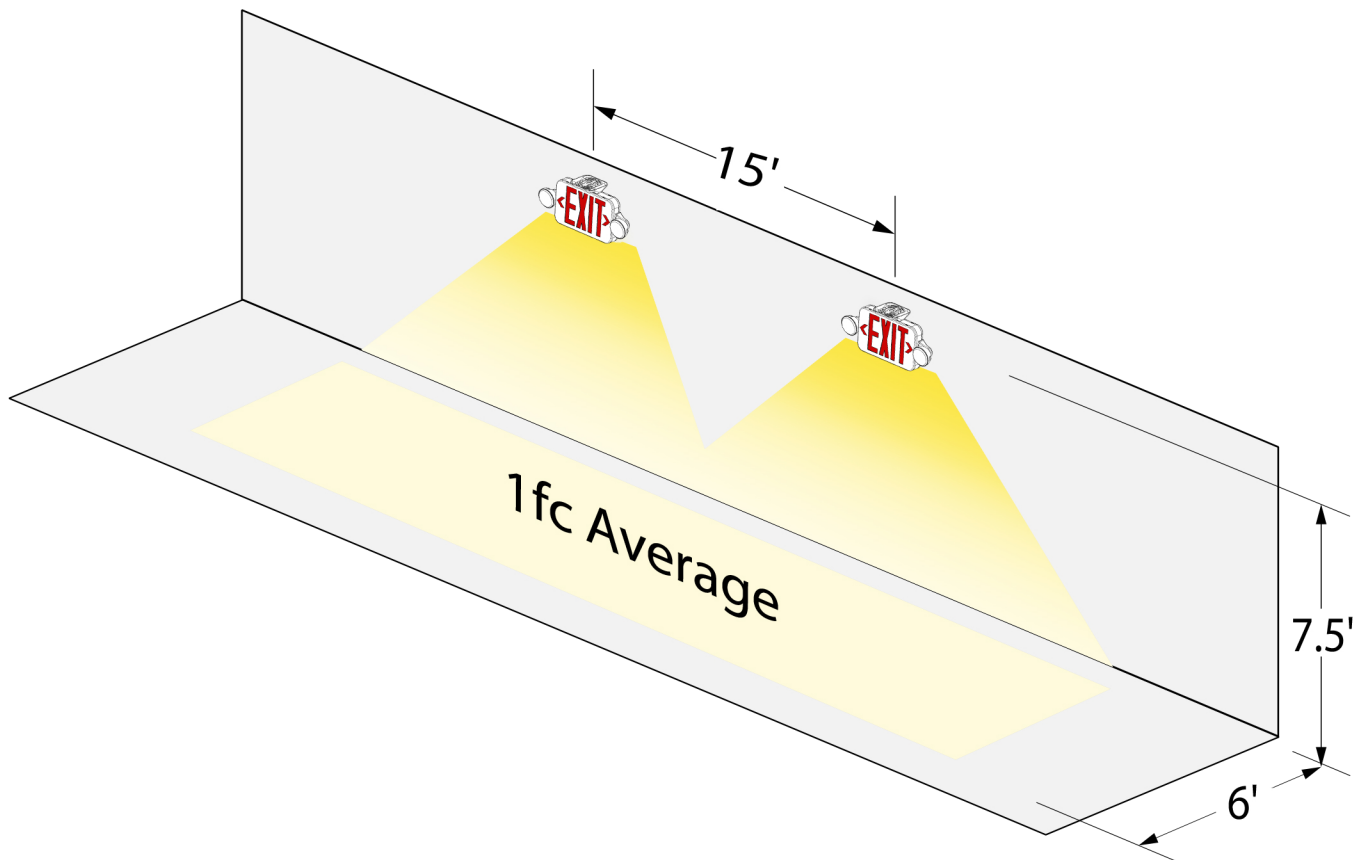

Luminaire Location Summary


Coordinates In Feet

Luminaire Location Summary						
LumNo	Label	X	Y	Z	Orient	Tilt
1	L112110302	61	27.5	7.5	350	-65
2	L112110302	79	27.5	7.5	190	-65
3	L112110302	80	27.5	7.5	350	-65
4	L112110302	41	27.5	7.5	190	-65
5	L112110302	42	27.5	7.5	350	-65
6	L112110302	98	27.5	7.5	190	-65
7	L112110302	99	27.5	7.5	350	-65
8	L112110302	60	27.5	7.5	190	-65

Calculation Summary

Calculation Summary							
Label	CalcType	Units	Avg	Max	Min	Avg/Min	Max/Min
CalcPts_1	Illuminance	Fc	1.01	1.9	0.3	3.37	6.33

Viewpoint

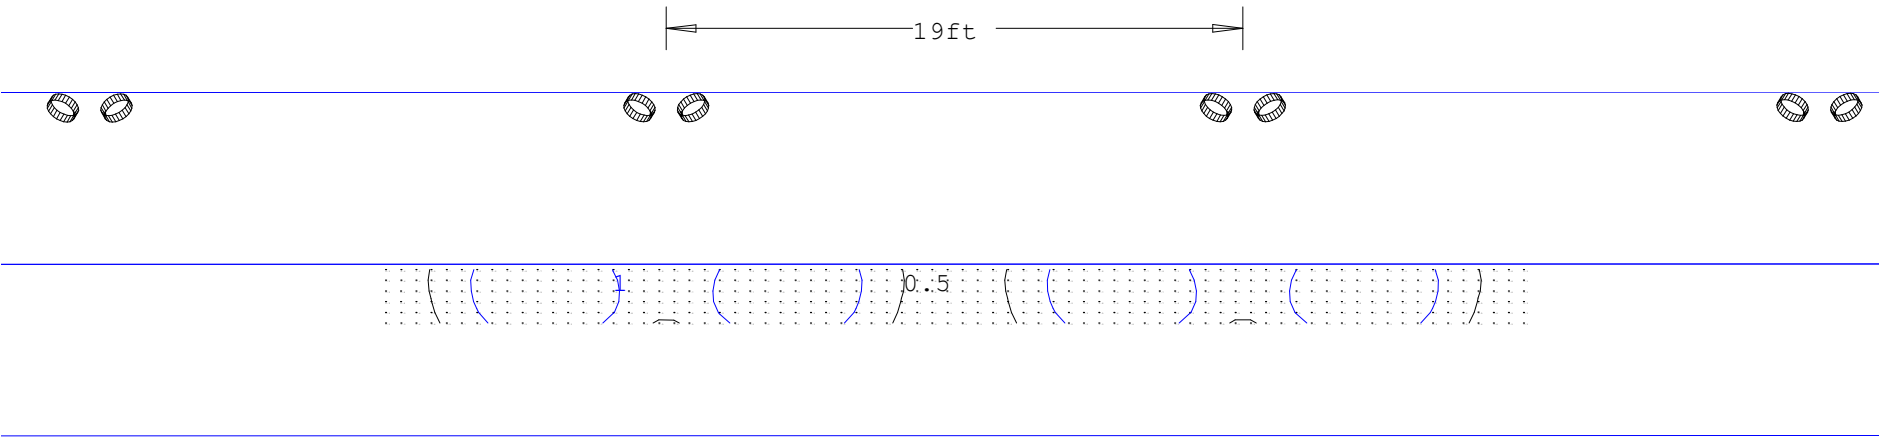

Luminaire Location Summary

Coordinates In Feet

Luminaire Location Summary						
LumNo	Label	X	Y	Z	Orient	Tilt
1	L112110302	63	27.5	7.5	325	-65
2	L112110302	77	27.5	7.5	215	-65
3	L112110302	78	27.5	7.5	325	-65
4	L112110302	47	27.5	7.5	215	-65
5	L112110302	48	27.5	7.5	325	-65
6	L112110302	92	27.5	7.5	215	-65
7	L112110302	93	27.5	7.5	325	-65
8	L112110302	62	27.5	7.5	215	-65

Calculation Summary

Calculation Summary							
Label	CalcType	Units	Avg	Max	Min	Avg/Min	Max/Min
CalcPts_1	Illuminance	Fc	1.00	1.9	0.3	3.33	6.33

Viewpoint

