


## Dual Color Micro LED Exit & Combo Signs

Pace's PAC0855 series offers Dual Color LED Exit Signs and Combos in a slim profile thermoplastic package. Each unit is universal, offering one red and one green stencil face, with an extra red and green diffuser that easily clip into the stencil face. Changing the LED color between red and green is as simple as moving a jumper on the PCB. The dual color exit/combo provides uniform illumination in an economical package. Long lasting, energy efficient, LEDs assure years of reliable service. The combo version has an innovative LED lamp head.

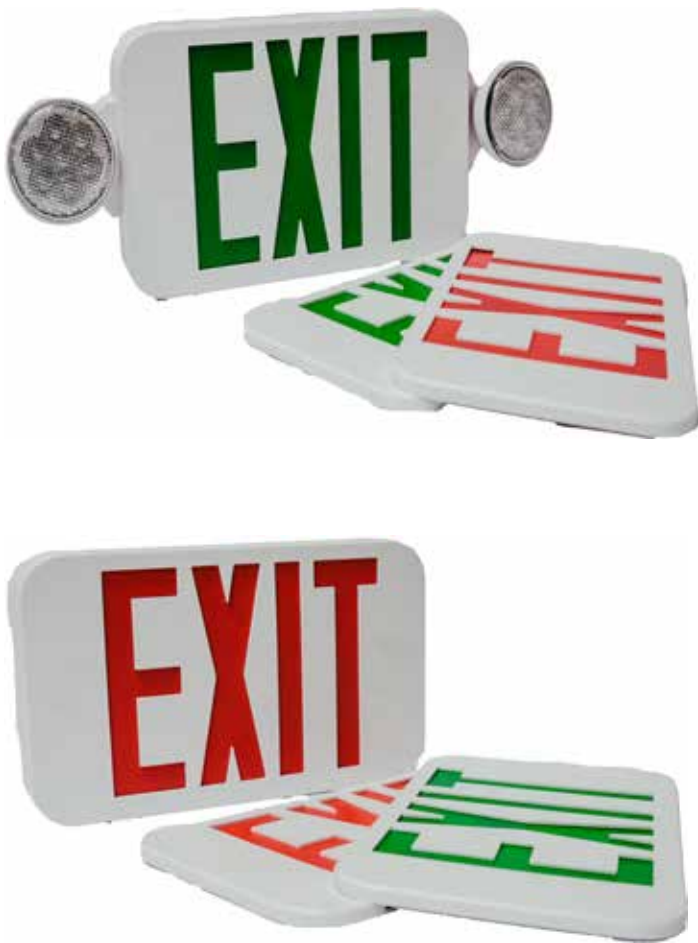

### Features

- Dual-voltage input 120V/277V
- Maintenance-free nickel-cadmium battery
- Energy-saving LED
- Optional Remote-Capable version offers up to an additional 3.0 Watts for 90 minutes
- Two factory-installed fully-adjustable, glare-free LED lighting heads
- Injection-molded, high-impact, UV-stabilized, UL94 V-0 thermoplastic construction in white finish
- Two replacement diffusers in red and green
- Snap-fit faceplates design for installation without tools
- Removable universal chevrons for directional indications
- Top, back or J-box mounting through universal mounting plate and canopy
- Universal single face and double face (extra faceplate included)
- Temp rating: 10°-44° damp
- DOE and CEC Registered
- UL 924 Listed for damp location
- CUL Listed
- Master Carton Quantity 6pc

### Lumen Output

- Total Lumens: 114

### Ordering Information

<sup>1</sup> Options is available on Combo Version ONLY

Series	Operation	Number of Faces	Finish	Options	Example Cat #
PAC0855	Blank = AC Only B = Battery Backup C = Combo	1 = Single Face 2 = Double Face	W = White B=Black	Blank = Regular RC = Remote Capable <sup>1</sup>	PAC0855B2W