



Model Number: PAC0889  
Mounting Height: 7.5 feet  
Corridor Width: 3 feet  
Spacing to achieve 1fc average: 23 feet

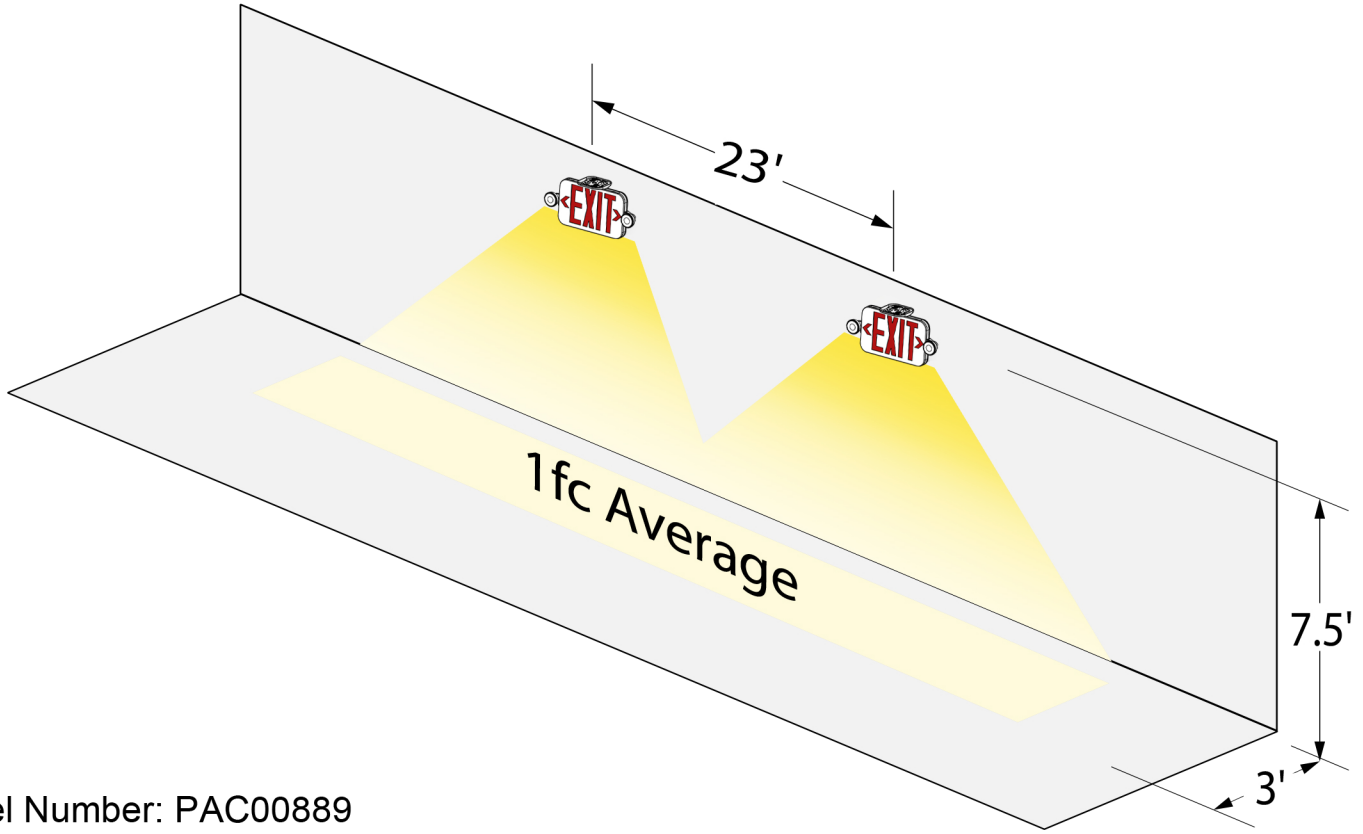

Model Number: PAC00889  
Mounting Height: 7.5 feet  
Corridor Width: 6 feet  
Spacing to achieve 1fc average: 15 feet

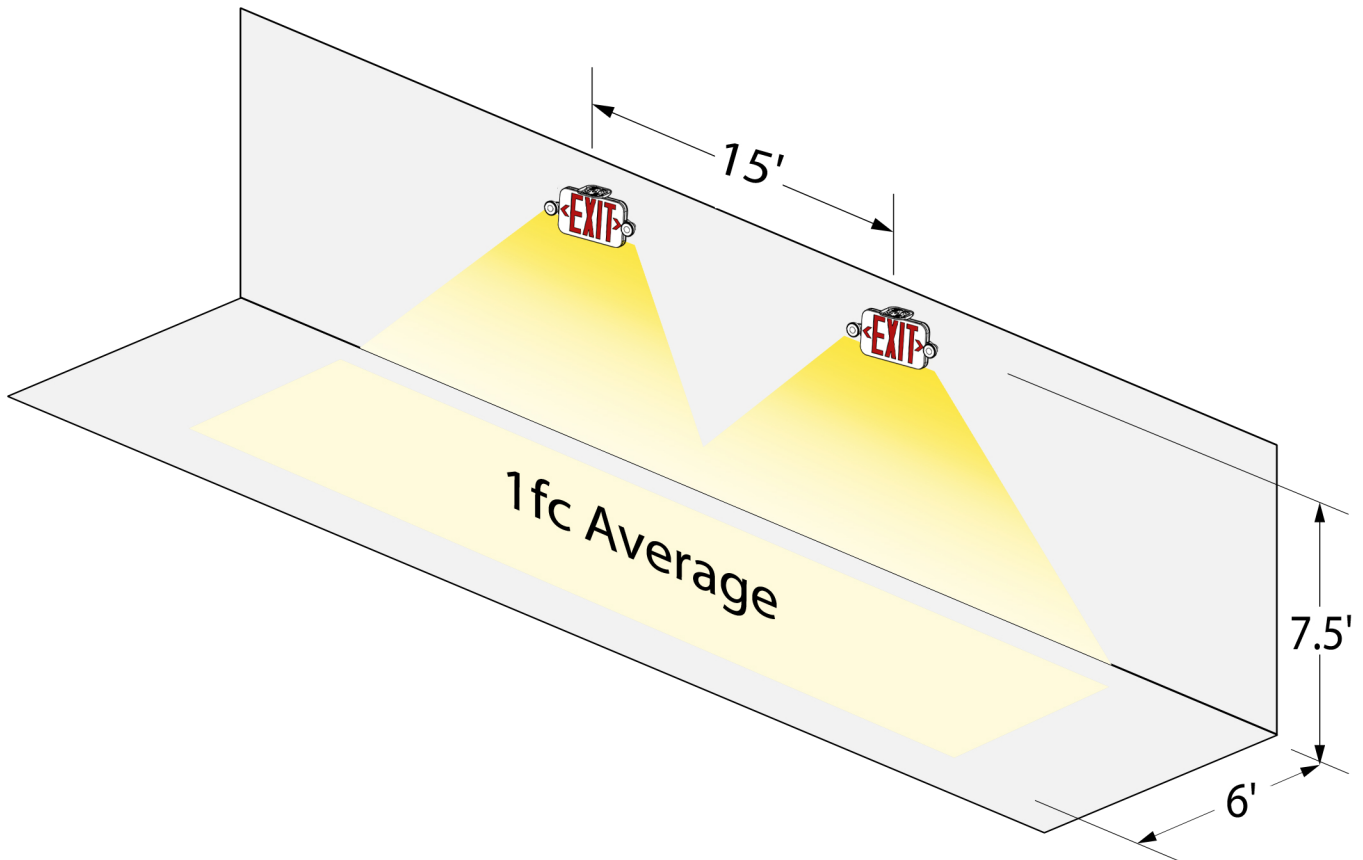

# Luminaire Location Summary


Coordinates In Feet

Luminaire Location Summary						
LumNo	Label	X	Y	Z	Orient	Tilt
1	L112110301	59	27.5	7.5	350	-65
2	L112110301	81	27.5	7.5	190	-65
3	L112110301	82	27.5	7.5	350	-65
4	L112110301	35	27.5	7.5	190	-65
5	L112110301	36	27.5	7.5	350	-65
6	L112110301	104	27.5	7.5	190	-65
7	L112110301	105	27.5	7.5	350	-65
8	L112110301	58	27.5	7.5	190	-65

# Calculation Summary

Calculation Summary							
Label	CalcType	Units	Avg	Max	Min	Avg/Min	Max/Min
CalcPts_1	Illuminance	Fc	1.01	4.4	0.1	10.10	44.00

# Viewpoint

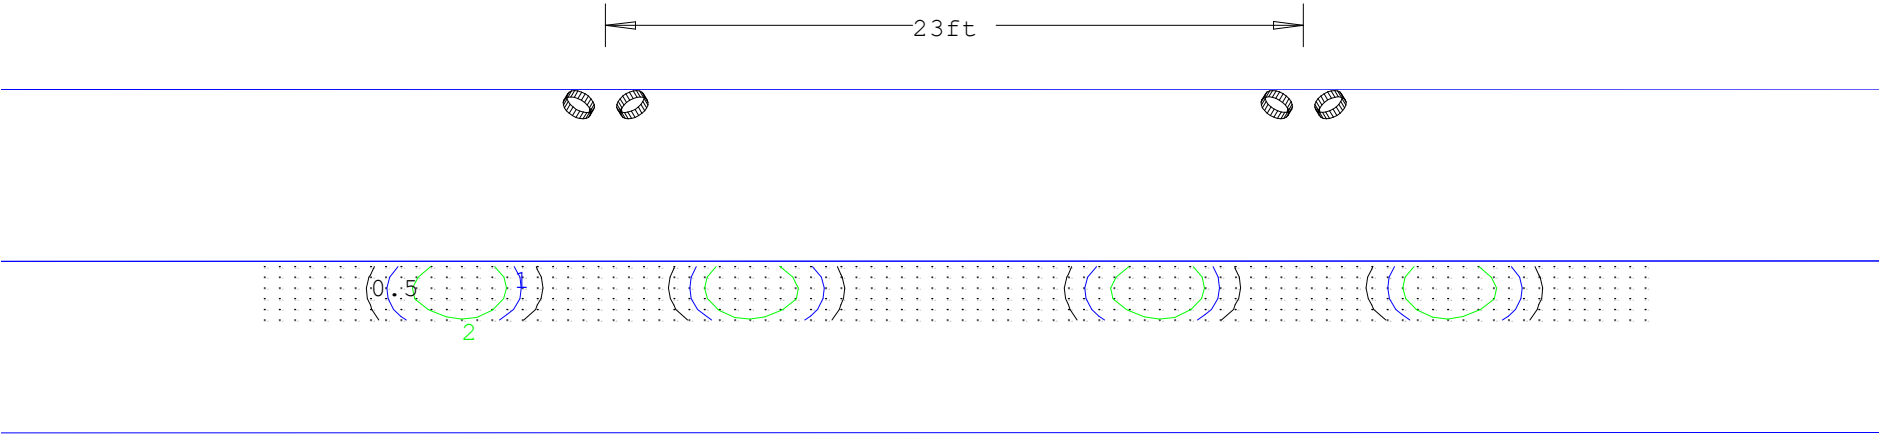

# Luminaire Location Summary

Coordinates In Feet

Luminaire Location Summary						
LumNo	Label	X	Y	Z	Orient	Tilt
1	L112110301	63	27.5	7.5	325	-65
2	L112110301	77	27.5	7.5	215	-65
3	L112110301	78	27.5	7.5	325	-65
4	L112110301	47	27.5	7.5	215	-65
5	L112110301	48	27.5	7.5	325	-65
6	L112110301	92	27.5	7.5	215	-65
7	L112110301	93	27.5	7.5	325	-65
8	L112110301	62	27.5	7.5	215	-65

# Calculation Summary

Calculation Summary							
Label	CalcType	Units	Avg	Max	Min	Avg/Min	Max/Min
CalcPts_1	Illuminance	Fc	1.02	4.5	0.2	5.10	22.50

# Viewpoint

