



Model Number: PAC0890
Mounting Height: 7.5 feet
Corridor Width: 3 feet
Spacing to achieve 1fc average: 70 feet

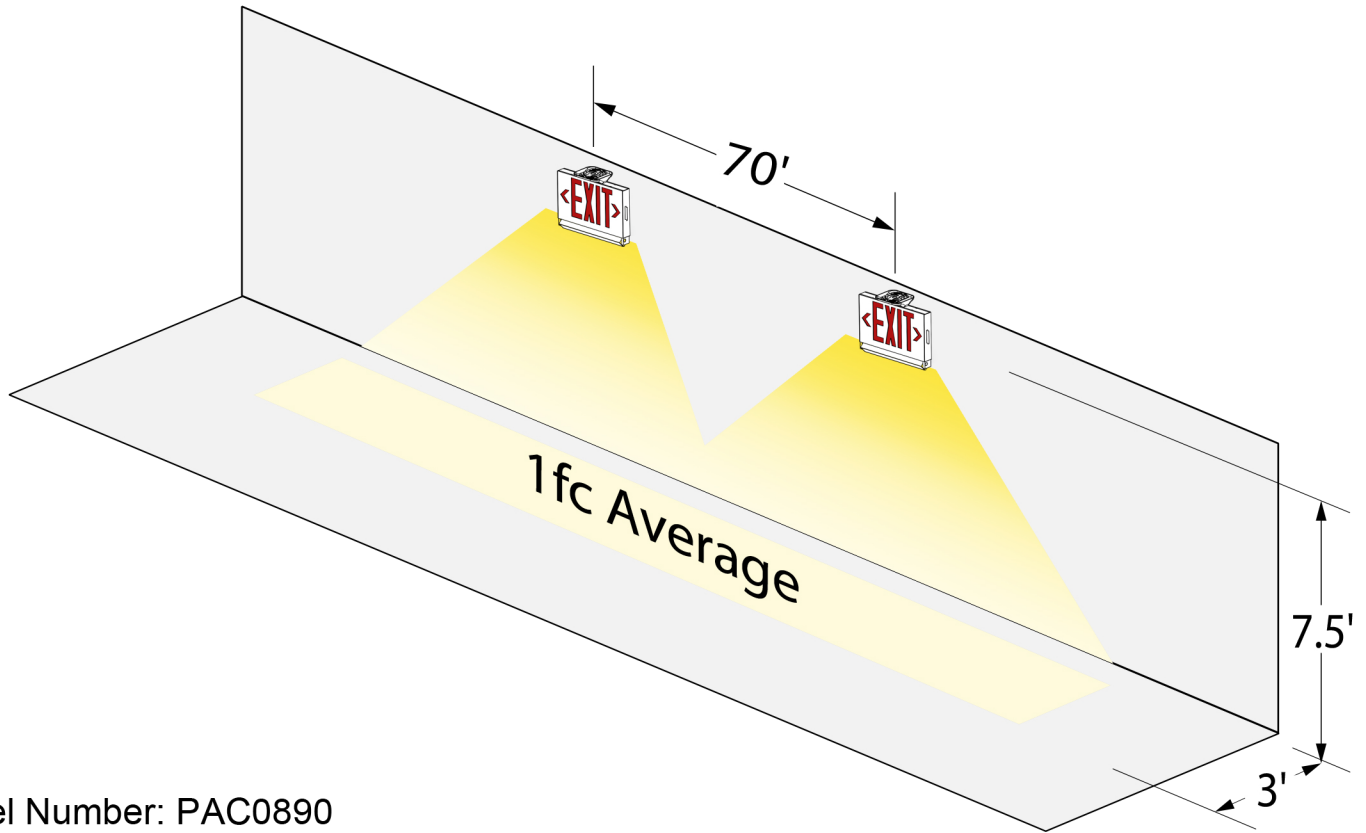

Model Number: PAC0890
Mounting Height: 7.5 feet
Corridor Width: 6 feet
Spacing to achieve 1fc average: 45 feet

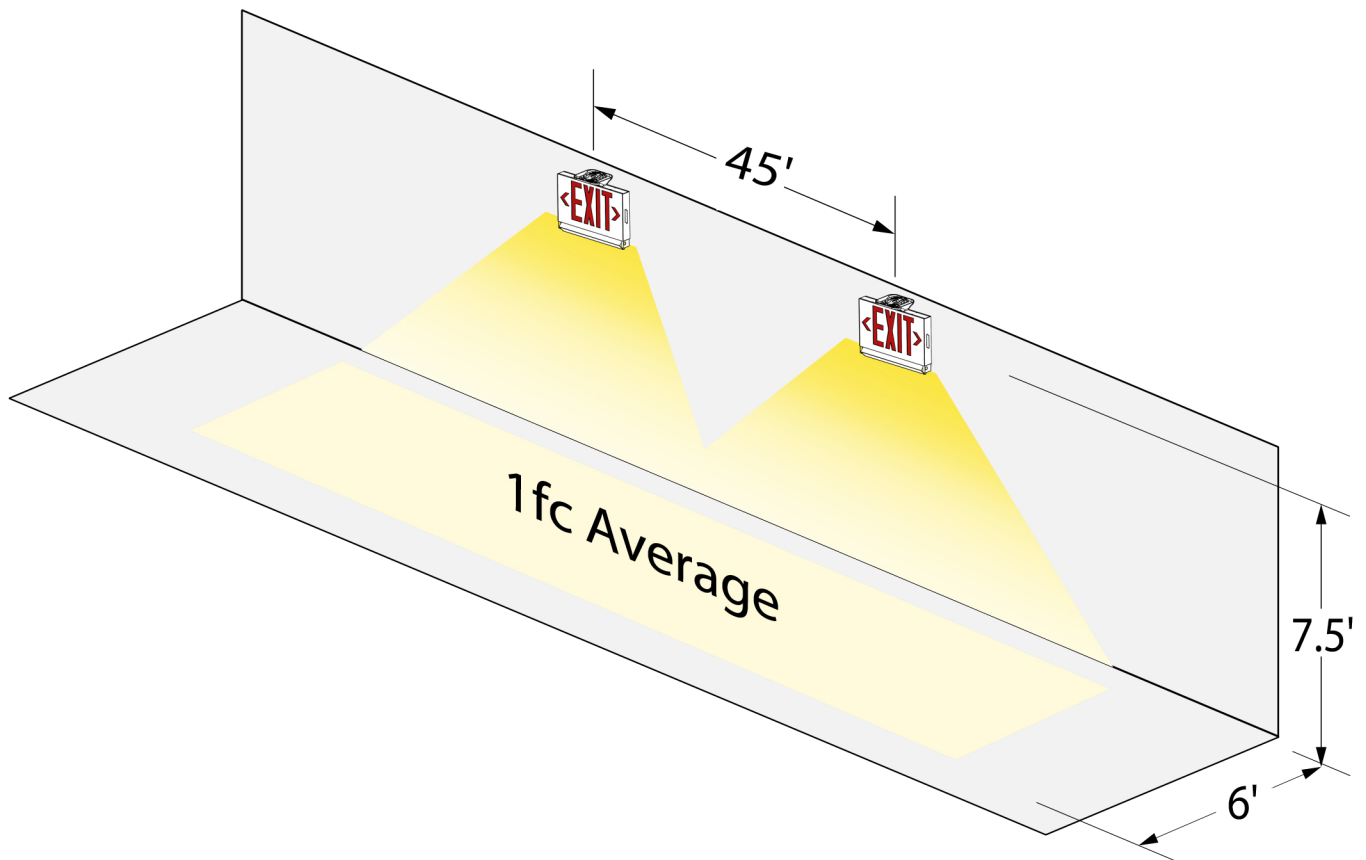

Luminaire Location Summary


Coordinates In Feet

Luminaire Location Summary						
LumNo	Label	X	Y	Z	Orient	Tilt
1	L112110304	35	27.75	7.5	90	0
3	L112110304	105	27.75	7.5	90	0
5	L112110304	-35	27.75	7.5	90	0
7	L112110304	175	27.75	7.5	90	0

Calculation Summary

Calculation Summary							
Label	CalcType	Units	Avg	Max	Min	Avg/Min	Max/Min
CalcPts_1	Illuminance	Fc	1.01	10.7	0.0	N.A.	N.A.

Viewpoint

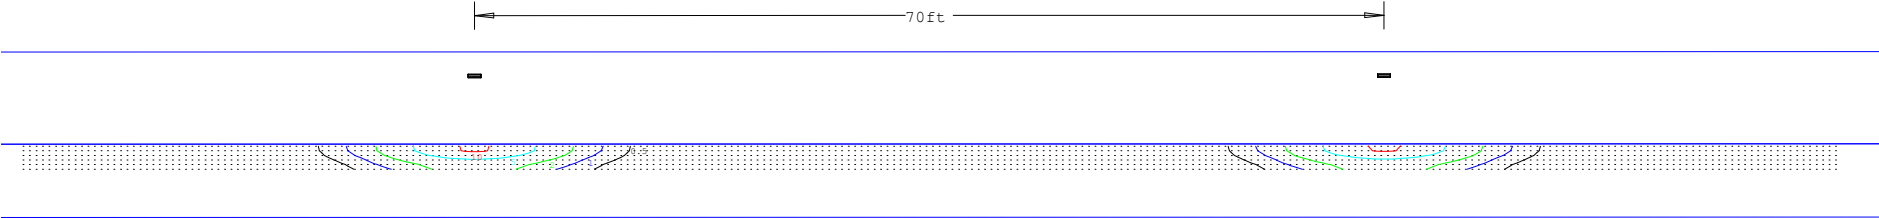

Luminaire Location Summary

Coordinates In Feet

Luminaire Location Summary						
LumNo	Label	X	Y	Z	Orient	Tilt
1	L112110304	47.5	27.75	7.5	90	0
3	L112110304	92.5	27.75	7.5	90	0
5	L112110304	2.5	27.75	7.5	90	0
7	L112110304	137.5	27.75	7.5	90	0

Calculation Summary

Calculation Summary							
Label	CalcType	Units	Avg	Max	Min	Avg/Min	Max/Min
CalcPts_1	Illuminance	Fc	1.01	10.6	0.0	N.A.	N.A.

Viewpoint

