



Model Number: PAC0954WH  
Mounting Height: 7.5 feet  
Corridor Width: 3 feet  
Spacing to achieve 1fc average: 130 feet

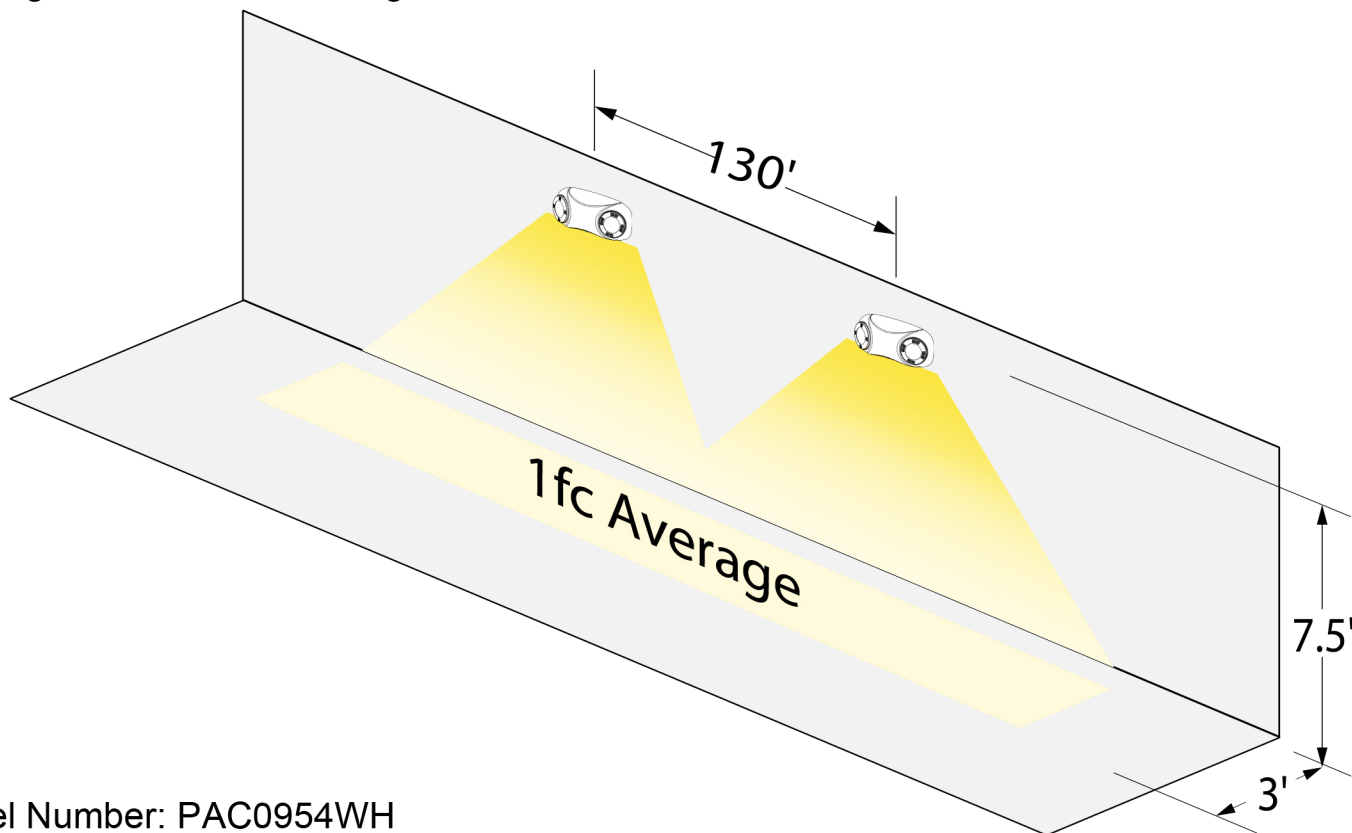

Model Number: PAC0954WH  
Mounting Height: 7.5 feet  
Corridor Width: 6 feet  
Spacing to achieve 1fc average: 112 feet

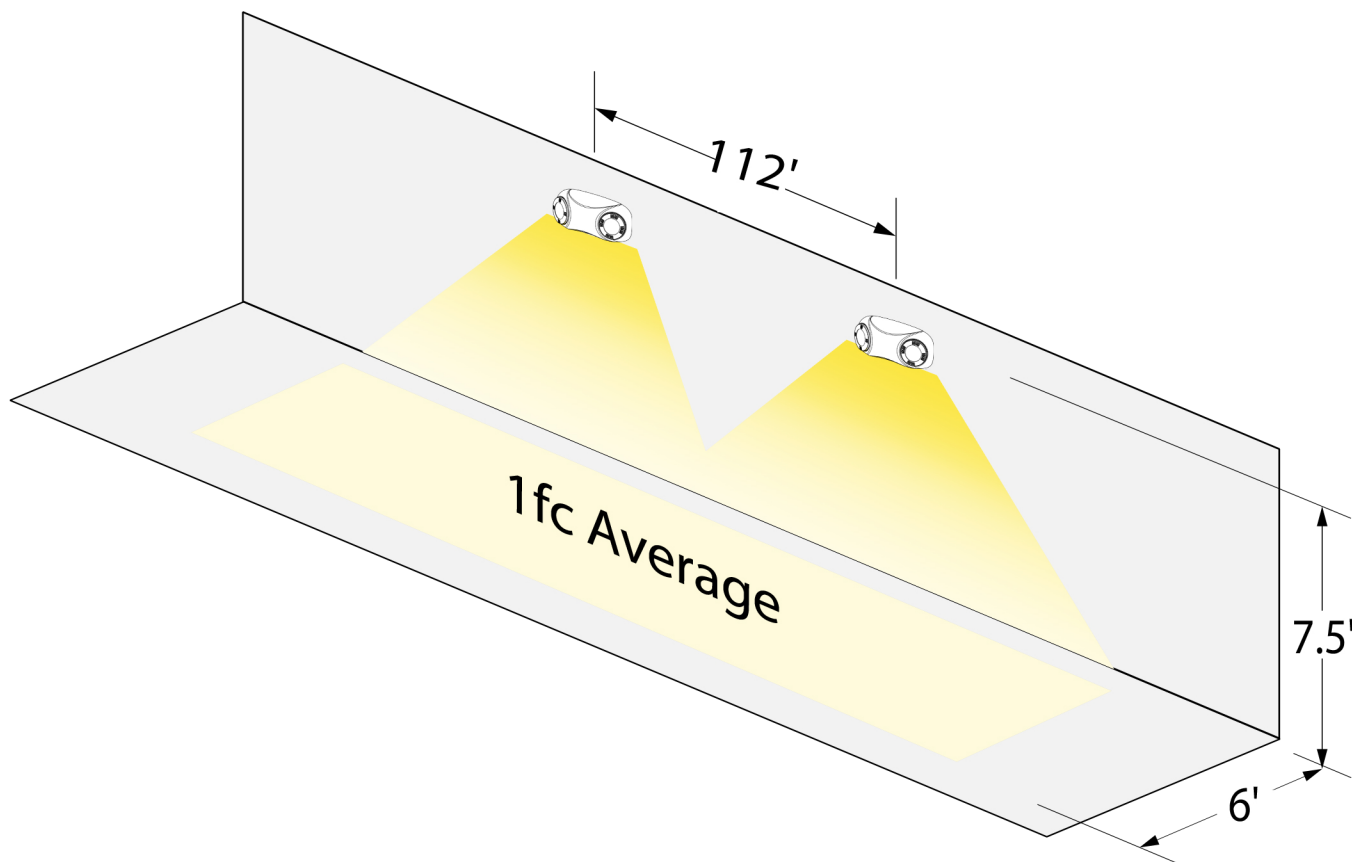

# Luminaire Location Summary


Coordinates In Feet

Luminaire Location Summary						
LumNo	Label	X	Y	Z	Orient	Tilt
1	L082211501	5.5	27.5	7.5	355	65
2	L082211501	134.5	27.5	7.5	185	65
3	L082211501	135.5	27.5	7.5	355	65
4	L082211501	-125.5	27.5	7.5	185	65
5	L082211501	-124.5	27.5	7.5	355	65
6	L082211501	264.5	27.5	7.5	185	65
7	L082211501	265.5	27.5	7.5	355	65
8	L082211501	4.5	27.5	7.5	185	65

# Calculation Summary

Calculation Summary							
Label	CalcType	Units	Avg	Max	Min	Avg/Min	Max/Min
CalcPts_1	Illuminance	Fc	1.01	5.5	0.0	N.A.	N.A.

# Viewpoint

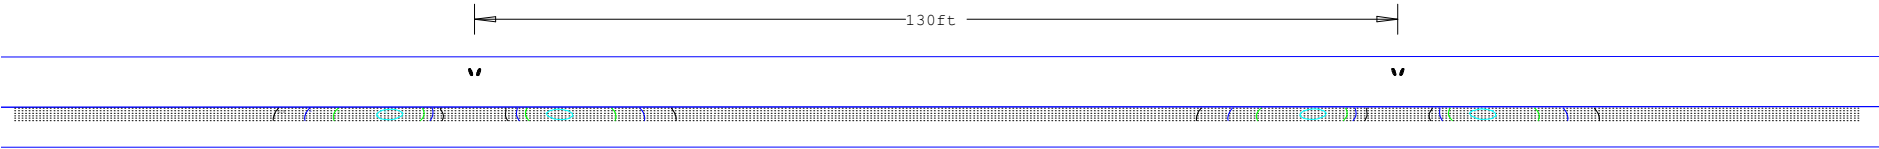

# Luminaire Location Summary

Coordinates In Feet

Luminaire Location Summary						
LumNo	Label	X	Y	Z	Orient	Tilt
1	L082211501	14.5	27.5	7.5	352.5	65
2	L082211501	125.5	27.5	7.5	187.5	65
3	L082211501	126.5	27.5	7.5	352.5	65
4	L082211501	-98.5	27.5	7.5	187.5	65
5	L082211501	-97.5	27.5	7.5	352.5	65
6	L082211501	237.5	27.5	7.5	187.5	65
7	L082211501	238.5	27.5	7.5	352.5	65
8	L082211501	13.5	27.5	7.5	187.5	65

# Calculation Summary

Calculation Summary							
Label	CalcType	Units	Avg	Max	Min	Avg/Min	Max/Min
CalcPts_1	Illuminance	Fc	1.01	5.5	0.1	10.10	55.00

# Viewpoint

