



Model Number: PAC6060
Mounting Height: 7.5 feet
Corridor Width: 3 feet
Spacing to achieve 1fc average: 18 feet

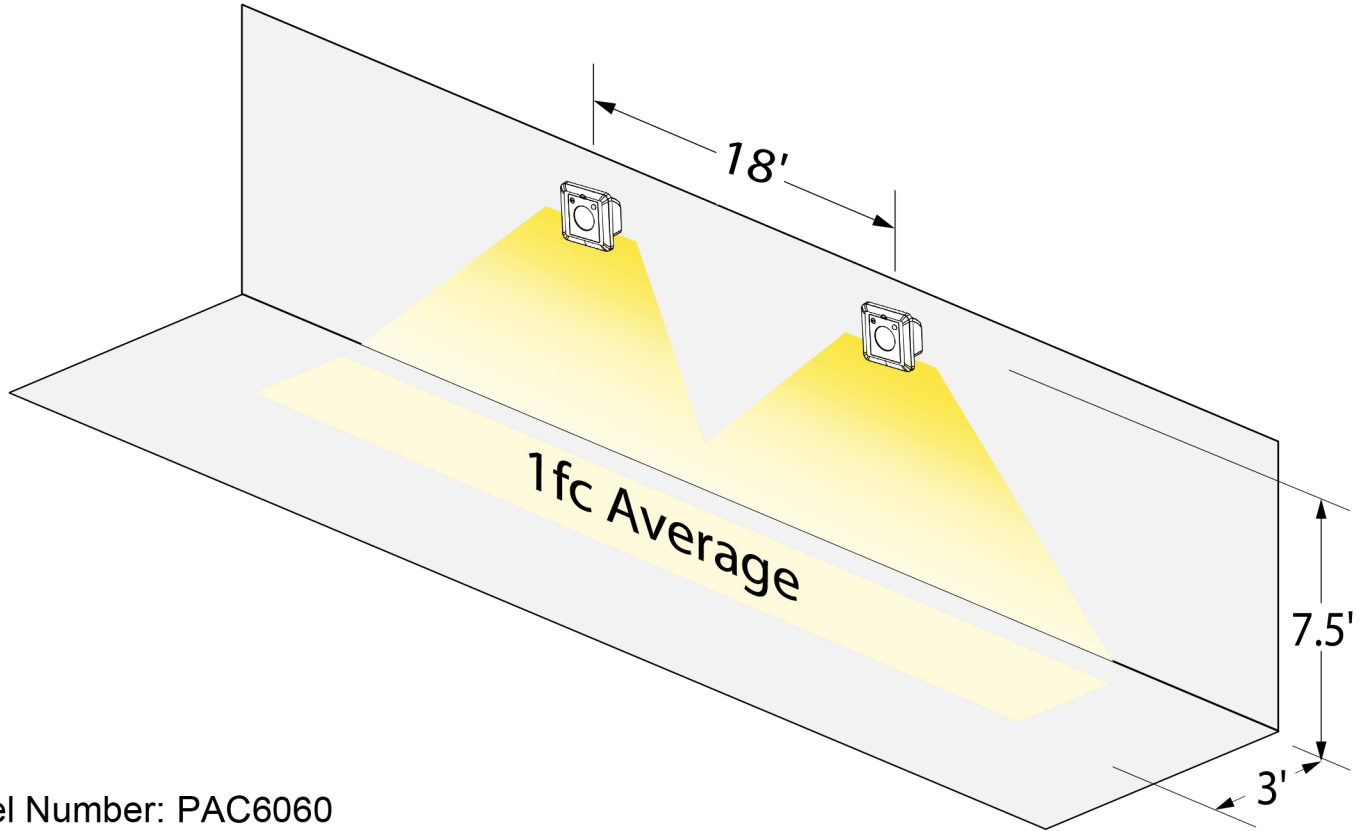

Model Number: PAC6060
Mounting Height: 7.5 feet
Corridor Width: 6 feet
Spacing to achieve 1fc average: 12 feet

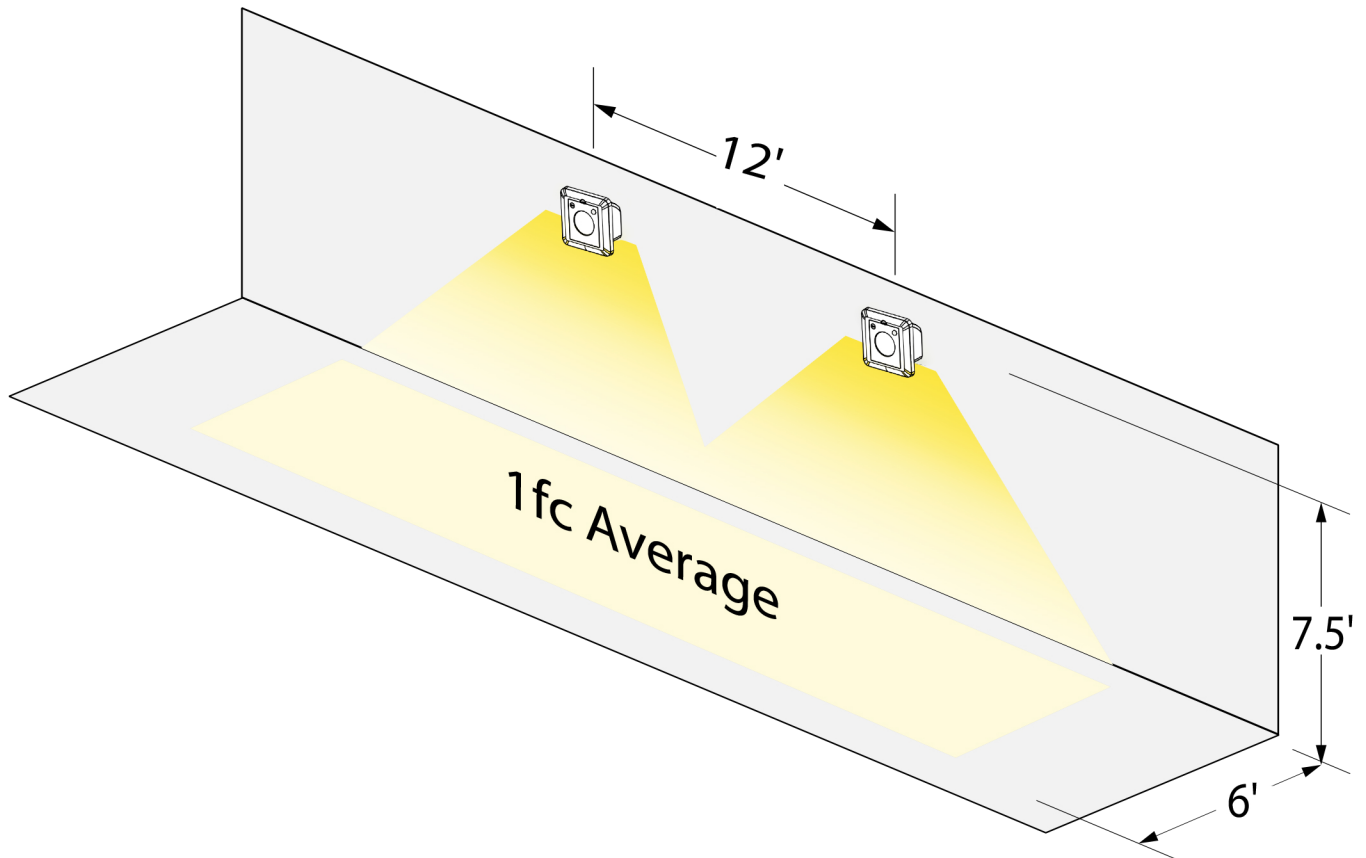

Luminaire Location Summary



Coordinates In Feet

Luminaire Location Summary						
LumNo	Label	X	Y	Z	Orient	Tilt
1	PAC6060 ITL84344	61	27.75	7.5	270	-35
3	PAC6060 ITL84344	79	27.75	7.5	270	-35
5	PAC6060 ITL84344	43	27.75	7.5	270	-35
7	PAC6060 ITL84344	97	27.75	7.5	270	-35

Calculation Summary

Calculation Summary							
Label	CalcType	Units	Avg	Max	Min	Avg/Min	Max/Min
CalcPts_1	Illuminance	Fc	0.98	5.6	0.0	N.A.	N.A.

Viewpoint

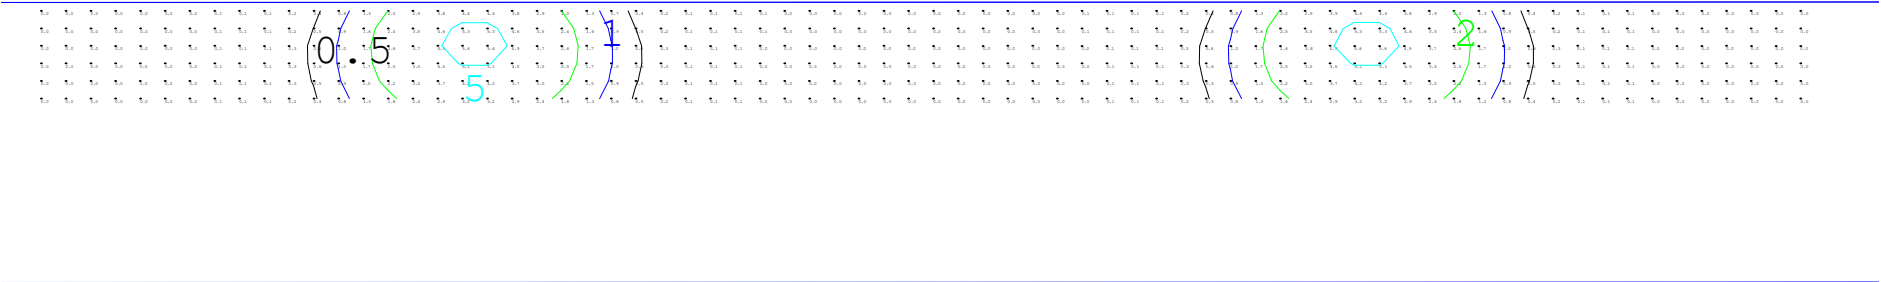

Luminaire Location Summary

Coordinates In Feet

Luminaire Location Summary						
LumNo	Label	X	Y	Z	Orient	Tilt
1	PAC6060 ITL84344	64	27.75	7.5	270	-25
3	PAC6060 ITL84344	76	27.75	7.5	270	-25
5	PAC6060 ITL84344	52	27.75	7.5	270	-25
7	PAC6060 ITL84344	88	27.75	7.5	270	-25

Calculation Summary

Calculation Summary							
Label	CalcType	Units	Avg	Max	Min	Avg/Min	Max/Min
CalcPts_1	Illuminance	Fc	1.00	4.9	0.0	N.A.	N.A.

Viewpoint

