

## J-Box Adjustable-Head Emergency Light

The J-box PIR emergency unit is a new product in the emergency lighting field. It is a perfect combination of traditional emergency lighting and passive infrared-sensing technology that can be used as a combination PIR lamp and emergency unit, or strictly as an emergency unit. It is a breakthrough in traditional emergency design, installing directly into a 4" J-box. Colored faceplates are available.

The passive infrared sensing (PIR) technology will activate when ambient light levels lower than 1.3FC are detected. The PIR will detect motion up to a distance of 15 feet, with a 125° field of view. Once motion is detected, the light will stay on for 15 minutes (running on AC power) and then automatically turn off. The unit will automatically switch to emergency mode when AC power is lost.




### Features

- 4.8V 1800 mAH nickel-metal hydride battery
- Emergency operation time: 90 minutes
- Dual-voltage input 120V/277V
- Output wattages: 2.5W, 3 LED
- Luminance: For 7.17 feet (2.1 meter) installation height, within 2.5 feet, luminance is 1.0~2.6 FC
- Temp rating: 10°-40° ambient
- UL 924 Listed
- CUL Listed

Master Carton Quantity 12pc

### Dimensions

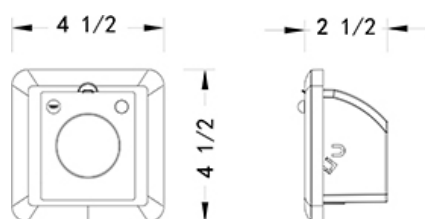

### Installation

Designed for installation in 4" J-box. Simply open the bottom cover, connect the lead of the product to the J-box power leads, then insert the unit into the J-Box and screw in the two corners. Press the test switch to make sure the unit is installed correctly, then put the faceplate on.

### Ordering Information

Special color finishes by request.

Series	Finish	Options	Example Cat #
PAC6060	W = White B = Black	E = Emergency P = PIR Sensor	PAC6060WEP