



Model Number: PAC6161
Mounting Height: 7.5 feet
Corridor Width: 3 feet
Spacing to achieve 1fc average: 26 feet

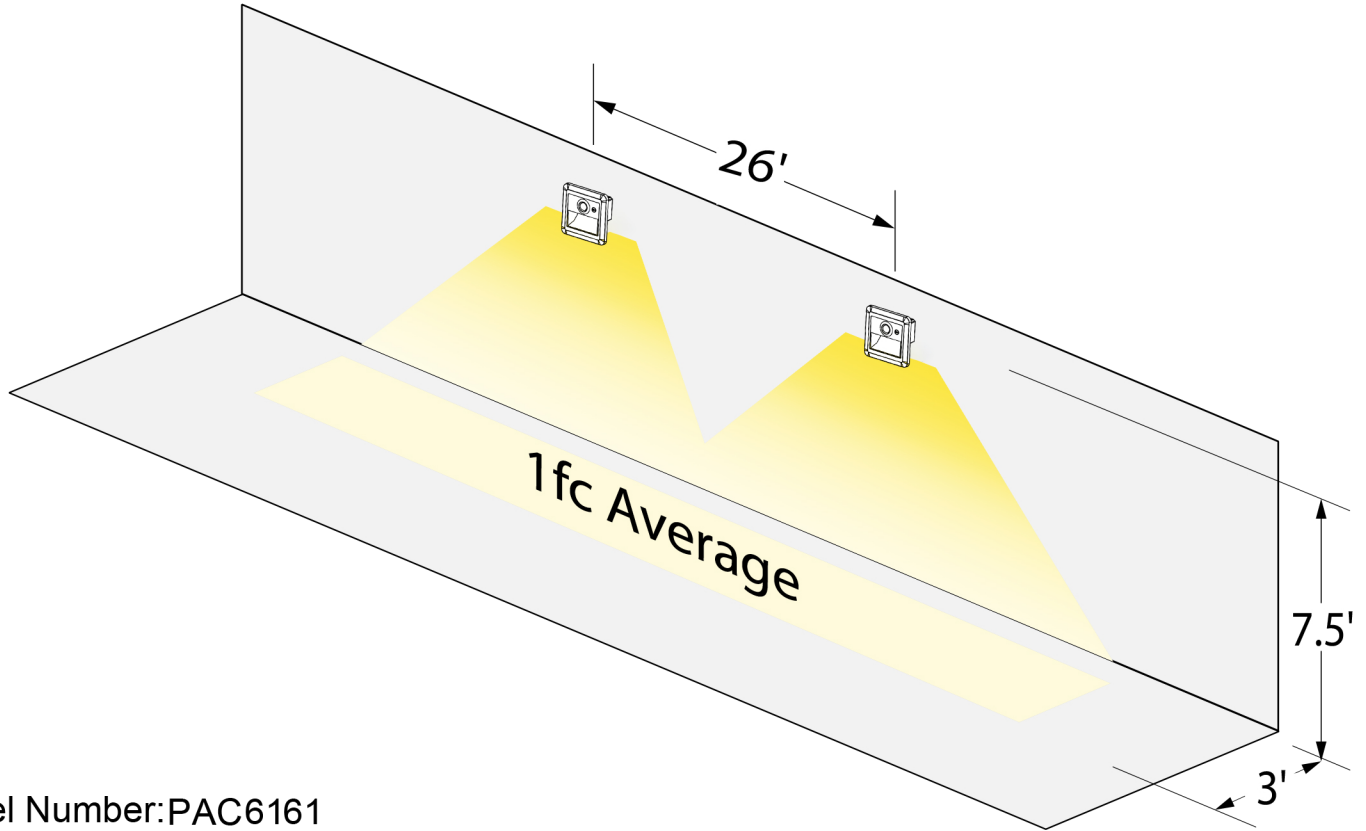

Model Number: PAC6161
Mounting Height: 7.5 feet
Corridor Width: 6 feet
Spacing to achieve 1fc average: 13 feet

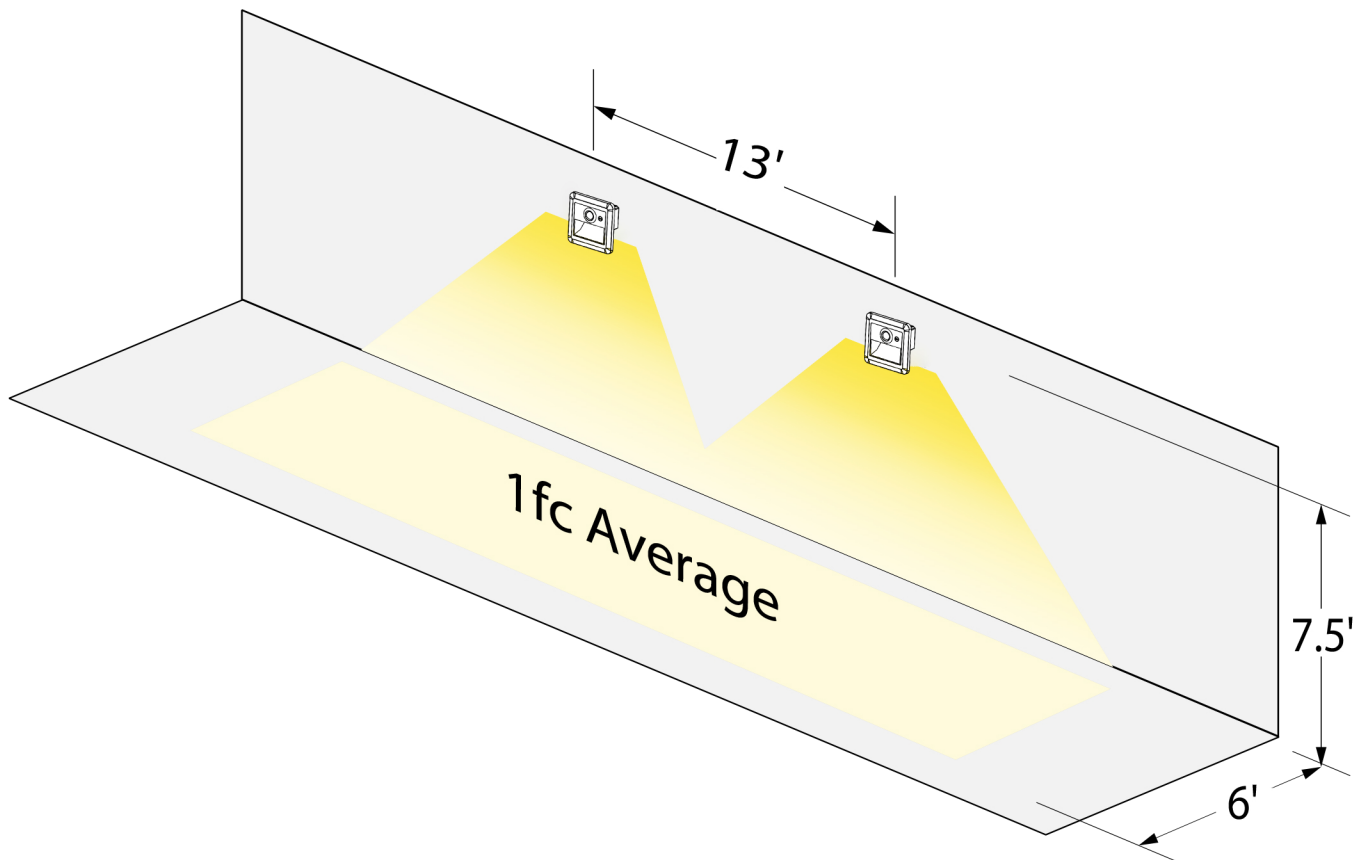

Luminaire Location Summary



Coordinates In Feet

Luminaire Location Summary						
LumNo	Label	X	Y	Z	Orient	Tilt
1	PAC6060 ITL84344	57	27.9	1.5	270	0
3	PAC6060 ITL84344	83	27.9	1.5	270	0
5	PAC6060 ITL84344	31	27.9	1.5	270	0
7	PAC6060 ITL84344	109	27.9	1.5	270	0

Calculation Summary

Calculation Summary							
Label	CalcType	Units	Avg	Max	Min	Avg/Min	Max/Min
CalcPts_1	Illuminance	Fc	1.02	58.6	0.0	N.A.	N.A.

Viewpoint

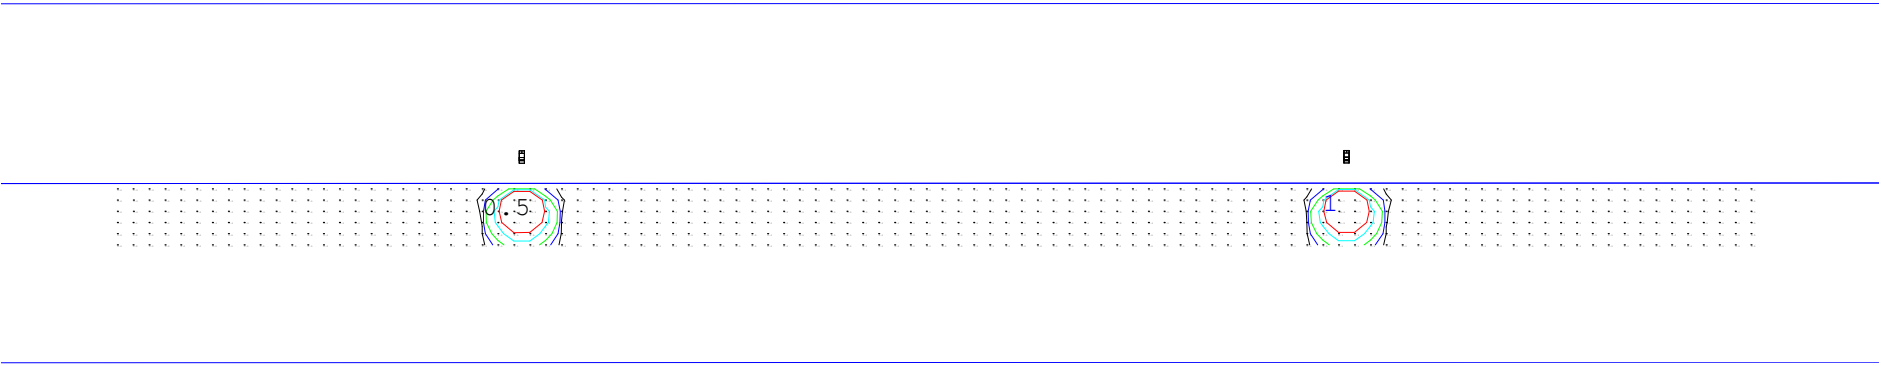

Luminaire Location Summary

Coordinates In Feet

Luminaire Location Summary						
LumNo	Label	X	Y	Z	Orient	Tilt
1	PAC6060 ITL84344	63.5	27.9	1.5	270	0
3	PAC6060 ITL84344	76.5	27.9	1.5	270	0
5	PAC6060 ITL84344	50.5	27.9	1.5	270	0
7	PAC6060 ITL84344	89.5	27.9	1.5	270	0

Calculation Summary

Calculation Summary							
Label	CalcType	Units	Avg	Max	Min	Avg/Min	Max/Min
CalcPts_1	Illuminance	Fc	1.04	58.4	0.0	N.A.	N.A.

Viewpoint

